9. Schematic Diagrams

9-1 Power (240 Voltage) - - -

9-1 Power (240 Voltage)

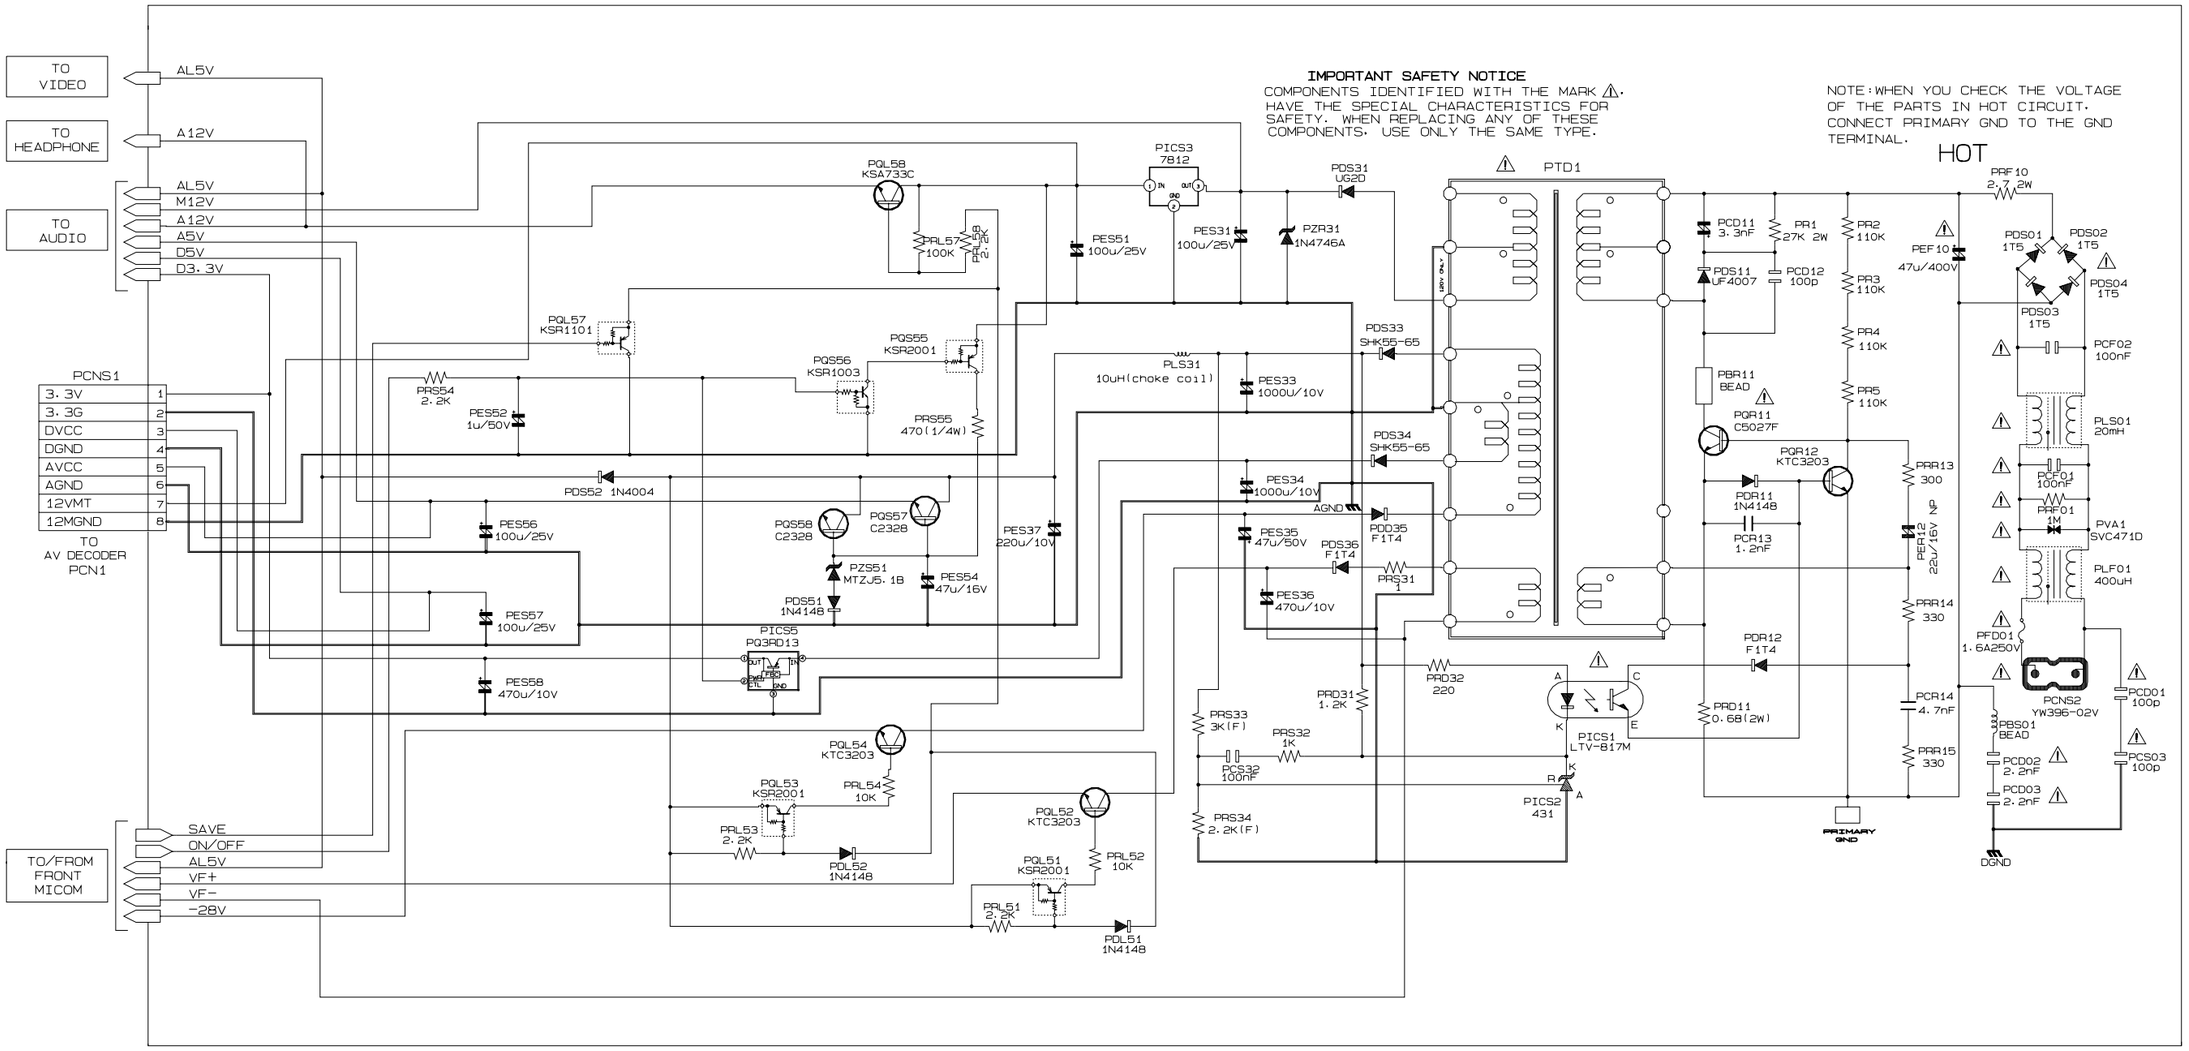

9-2 Power (Free Voltage)

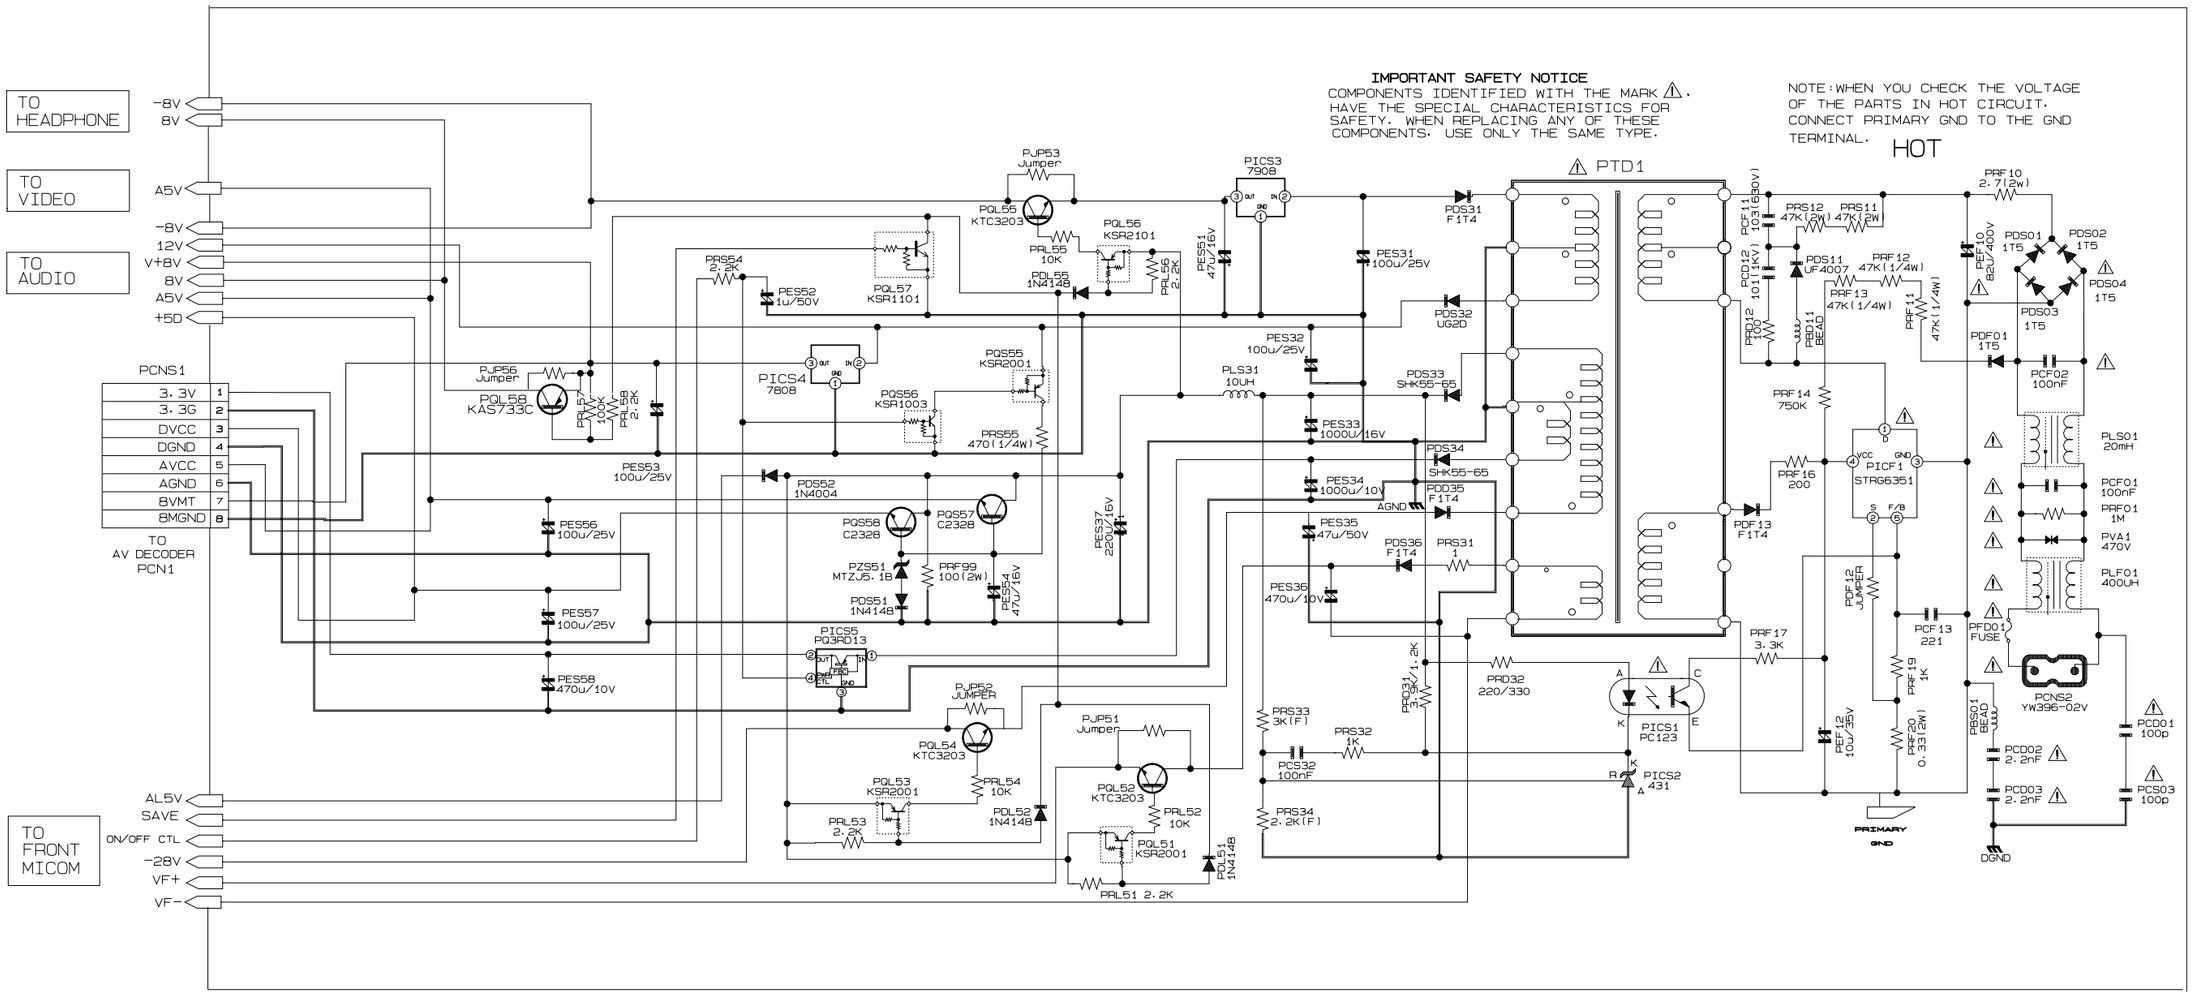

9-3 AV-Decoder/Main-Micom

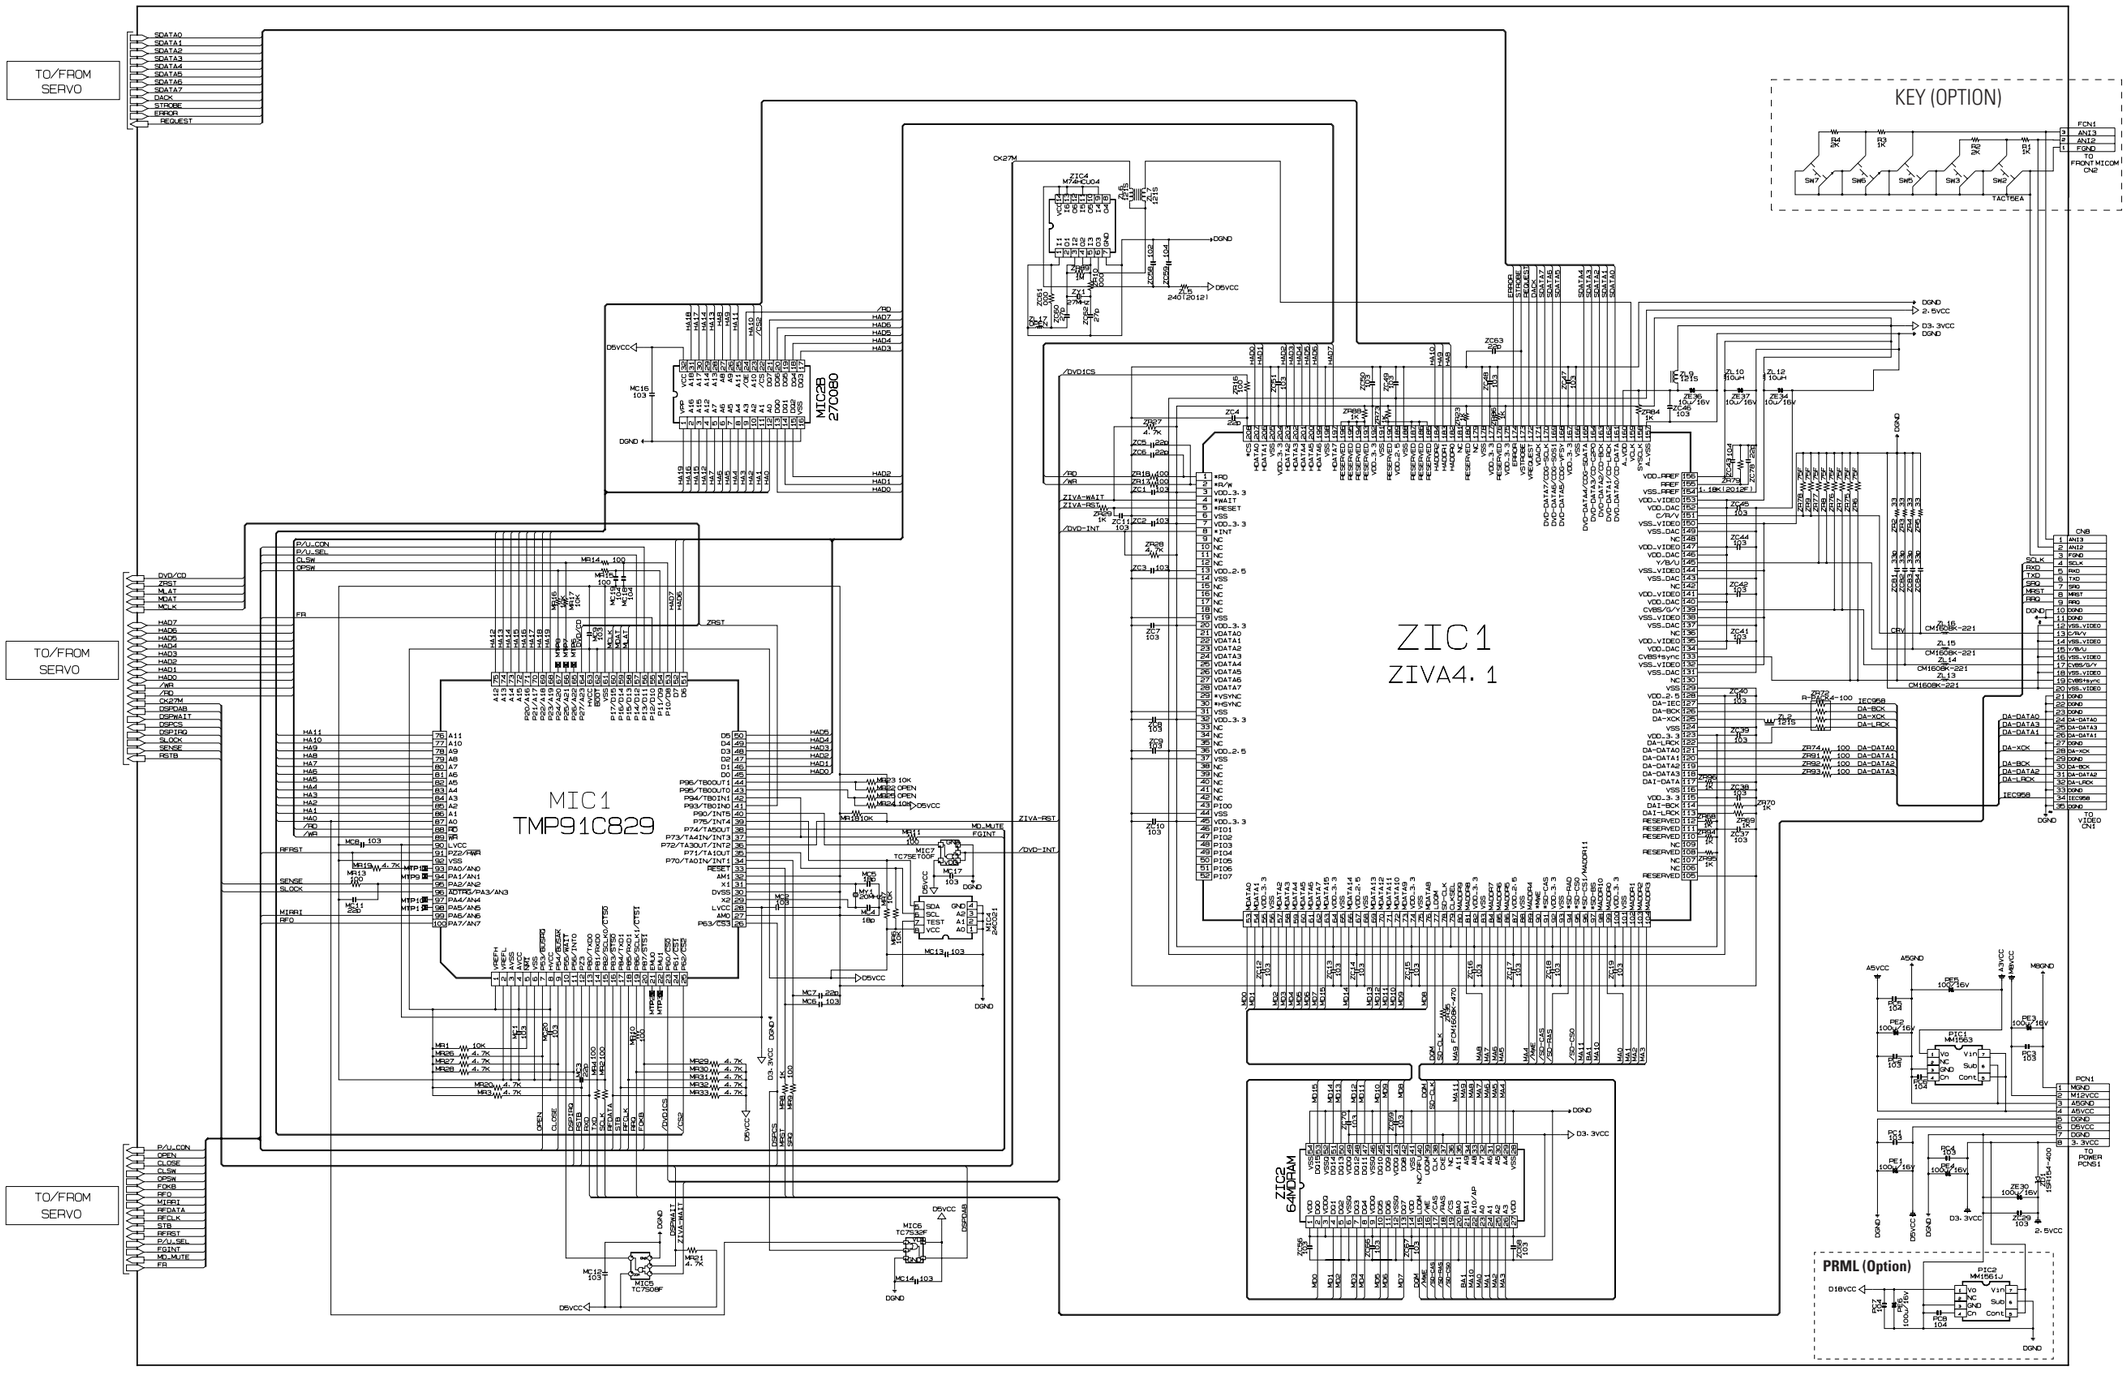

9-4 Servo

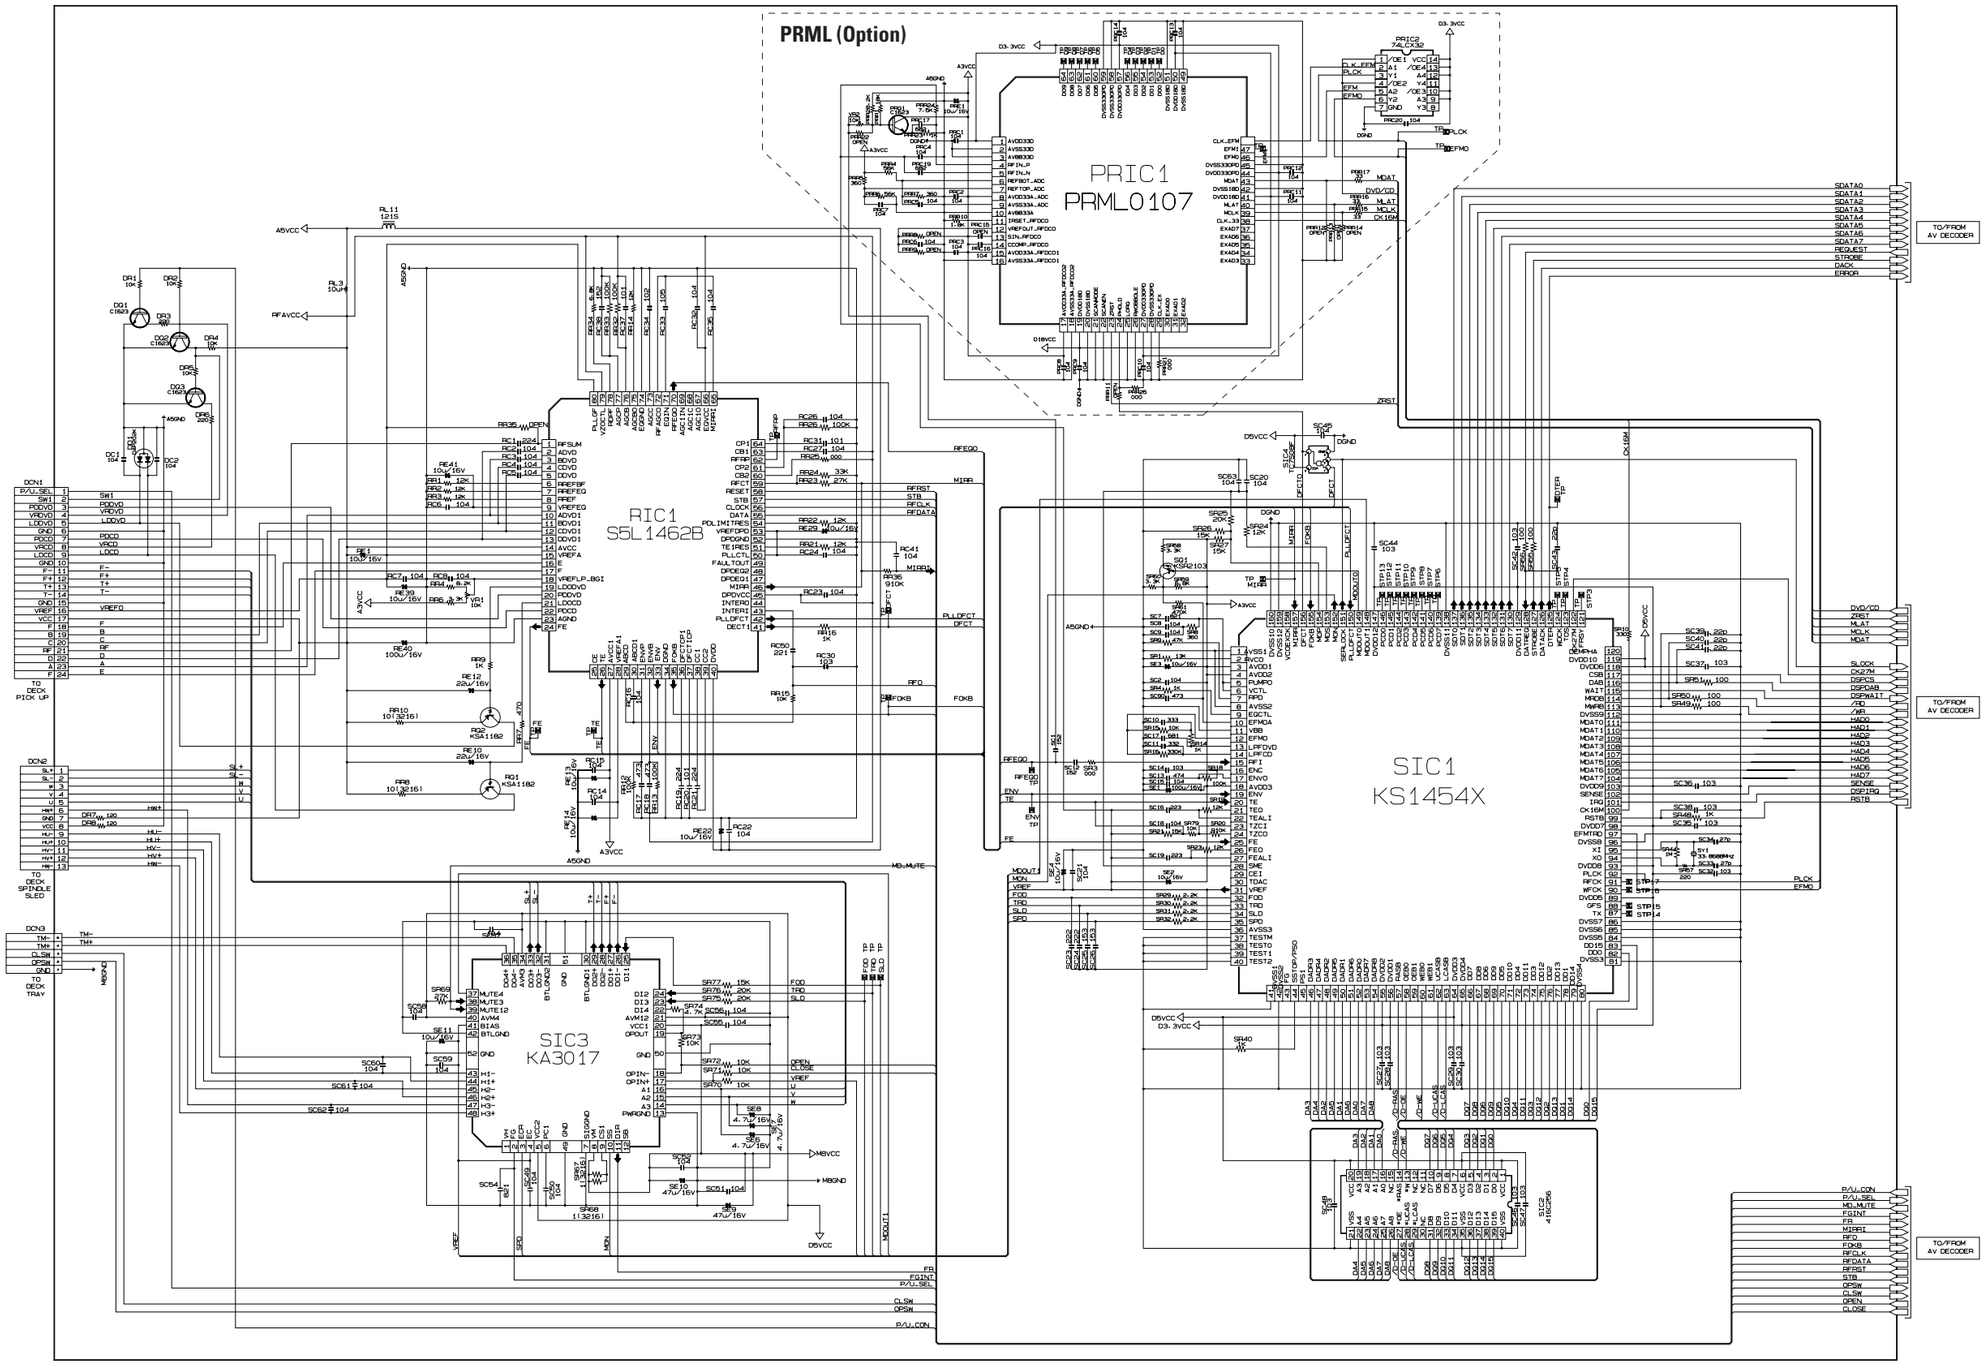
PRML (Option)
PRIC1
PRML0107
RIC1
S5L1462B
SIC1
KS1454X
SIC3
KA3017
TO/FROM AV DECODER
TO DECK PICK UP
TO DECK SPINDLE SLED
TO DECK TRAY

9-5 Front-Micom/VFD Display (Only for RCA Jack Output Models)

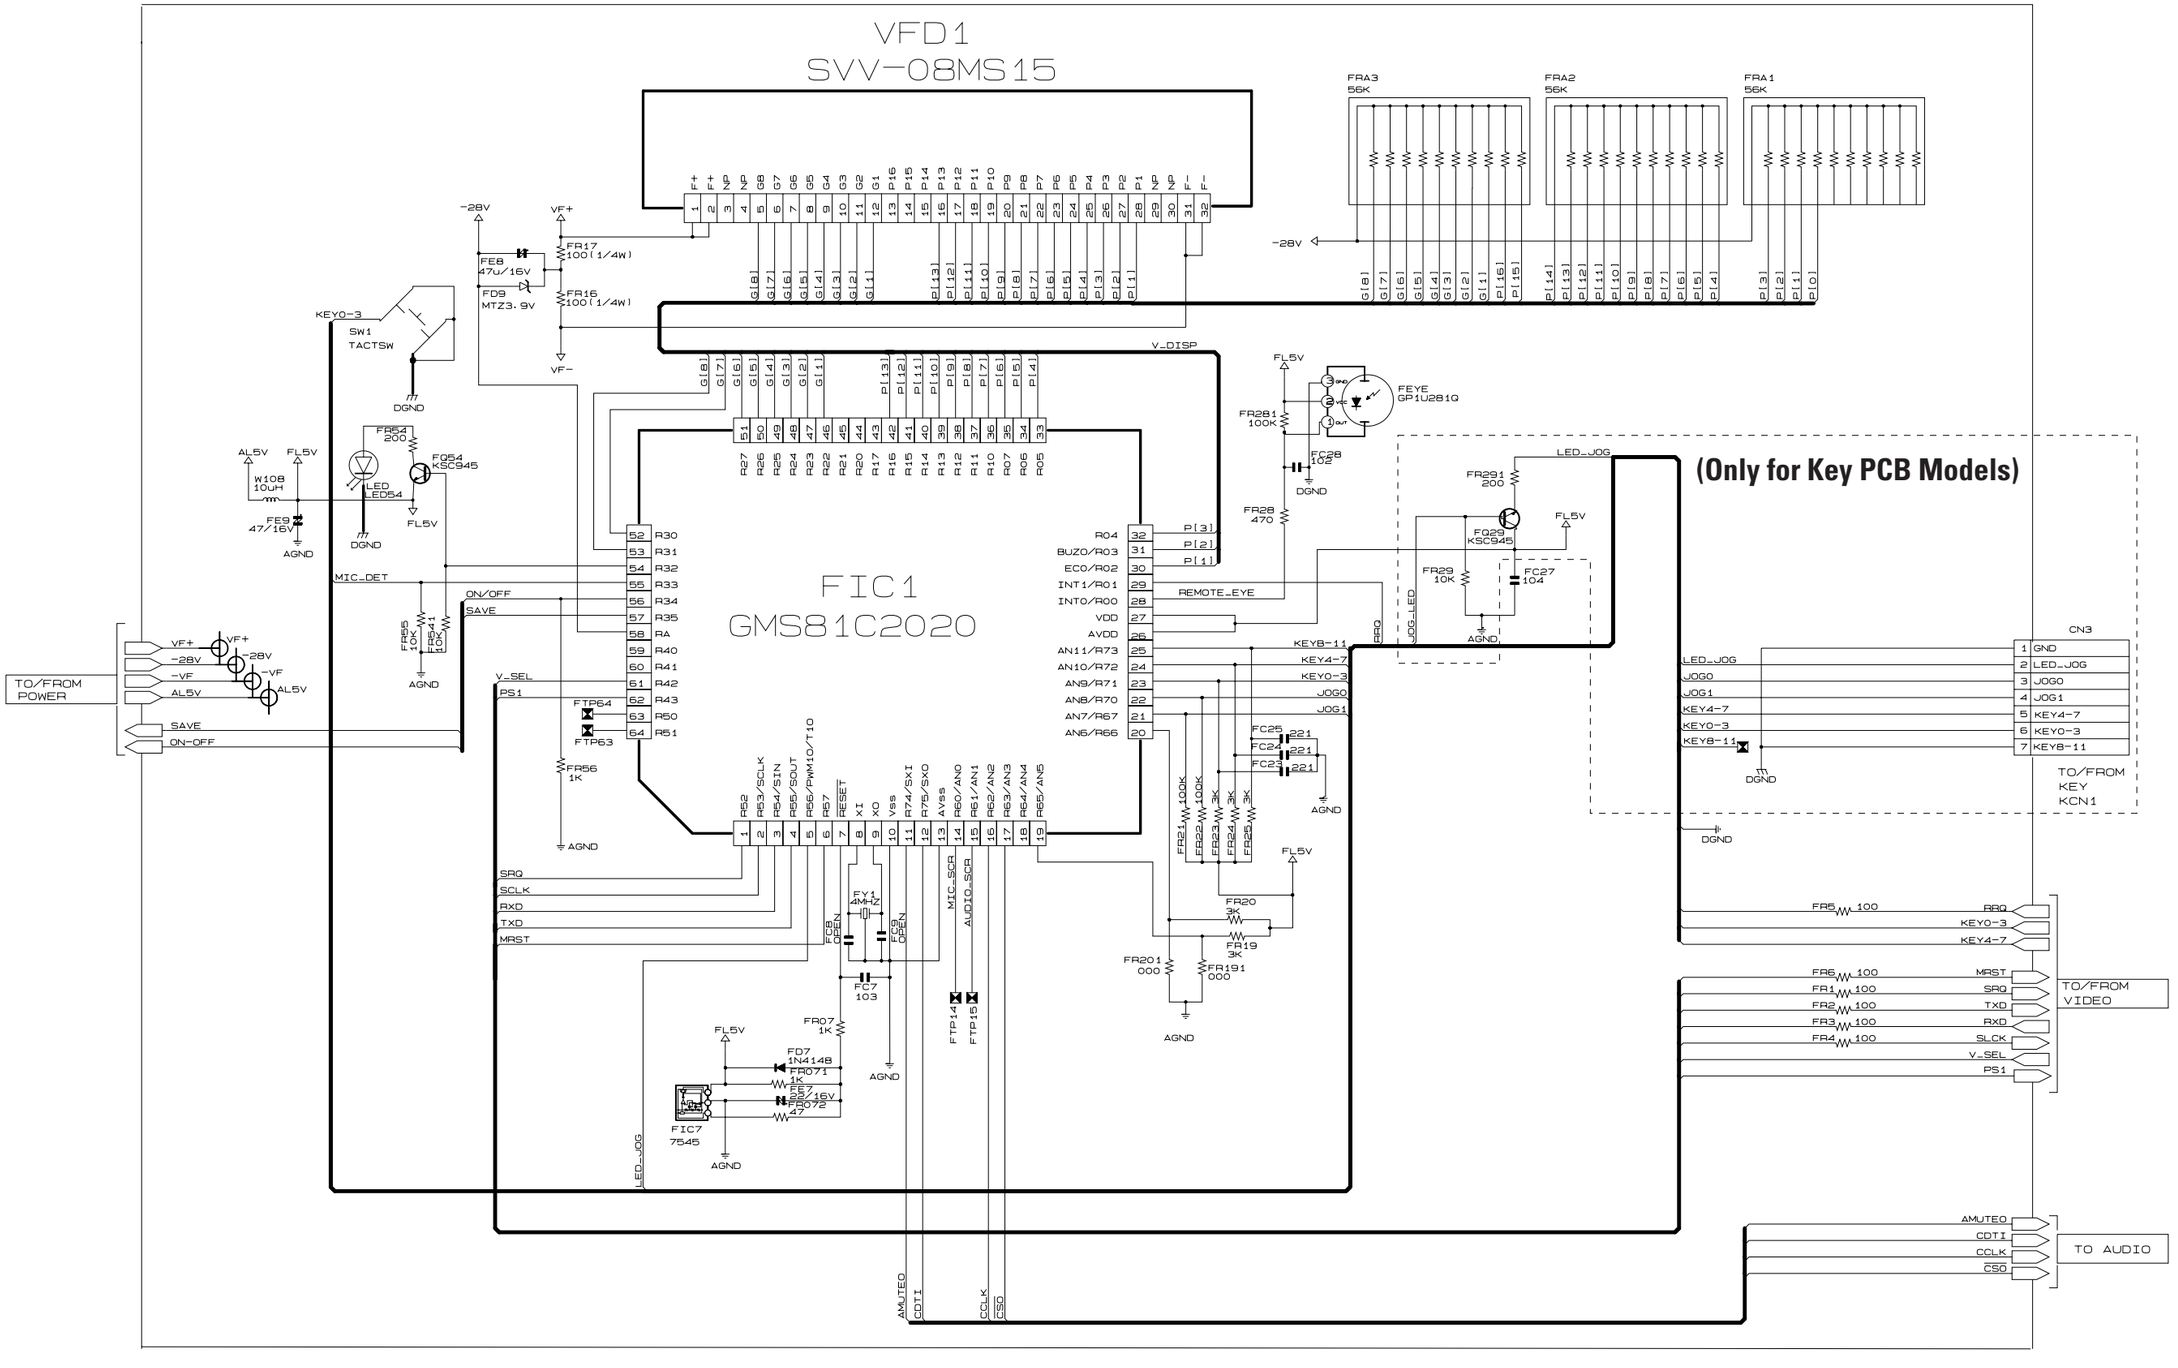

9-6 Front-Micom/VFD Display (Only for Scart Jack Output Models)

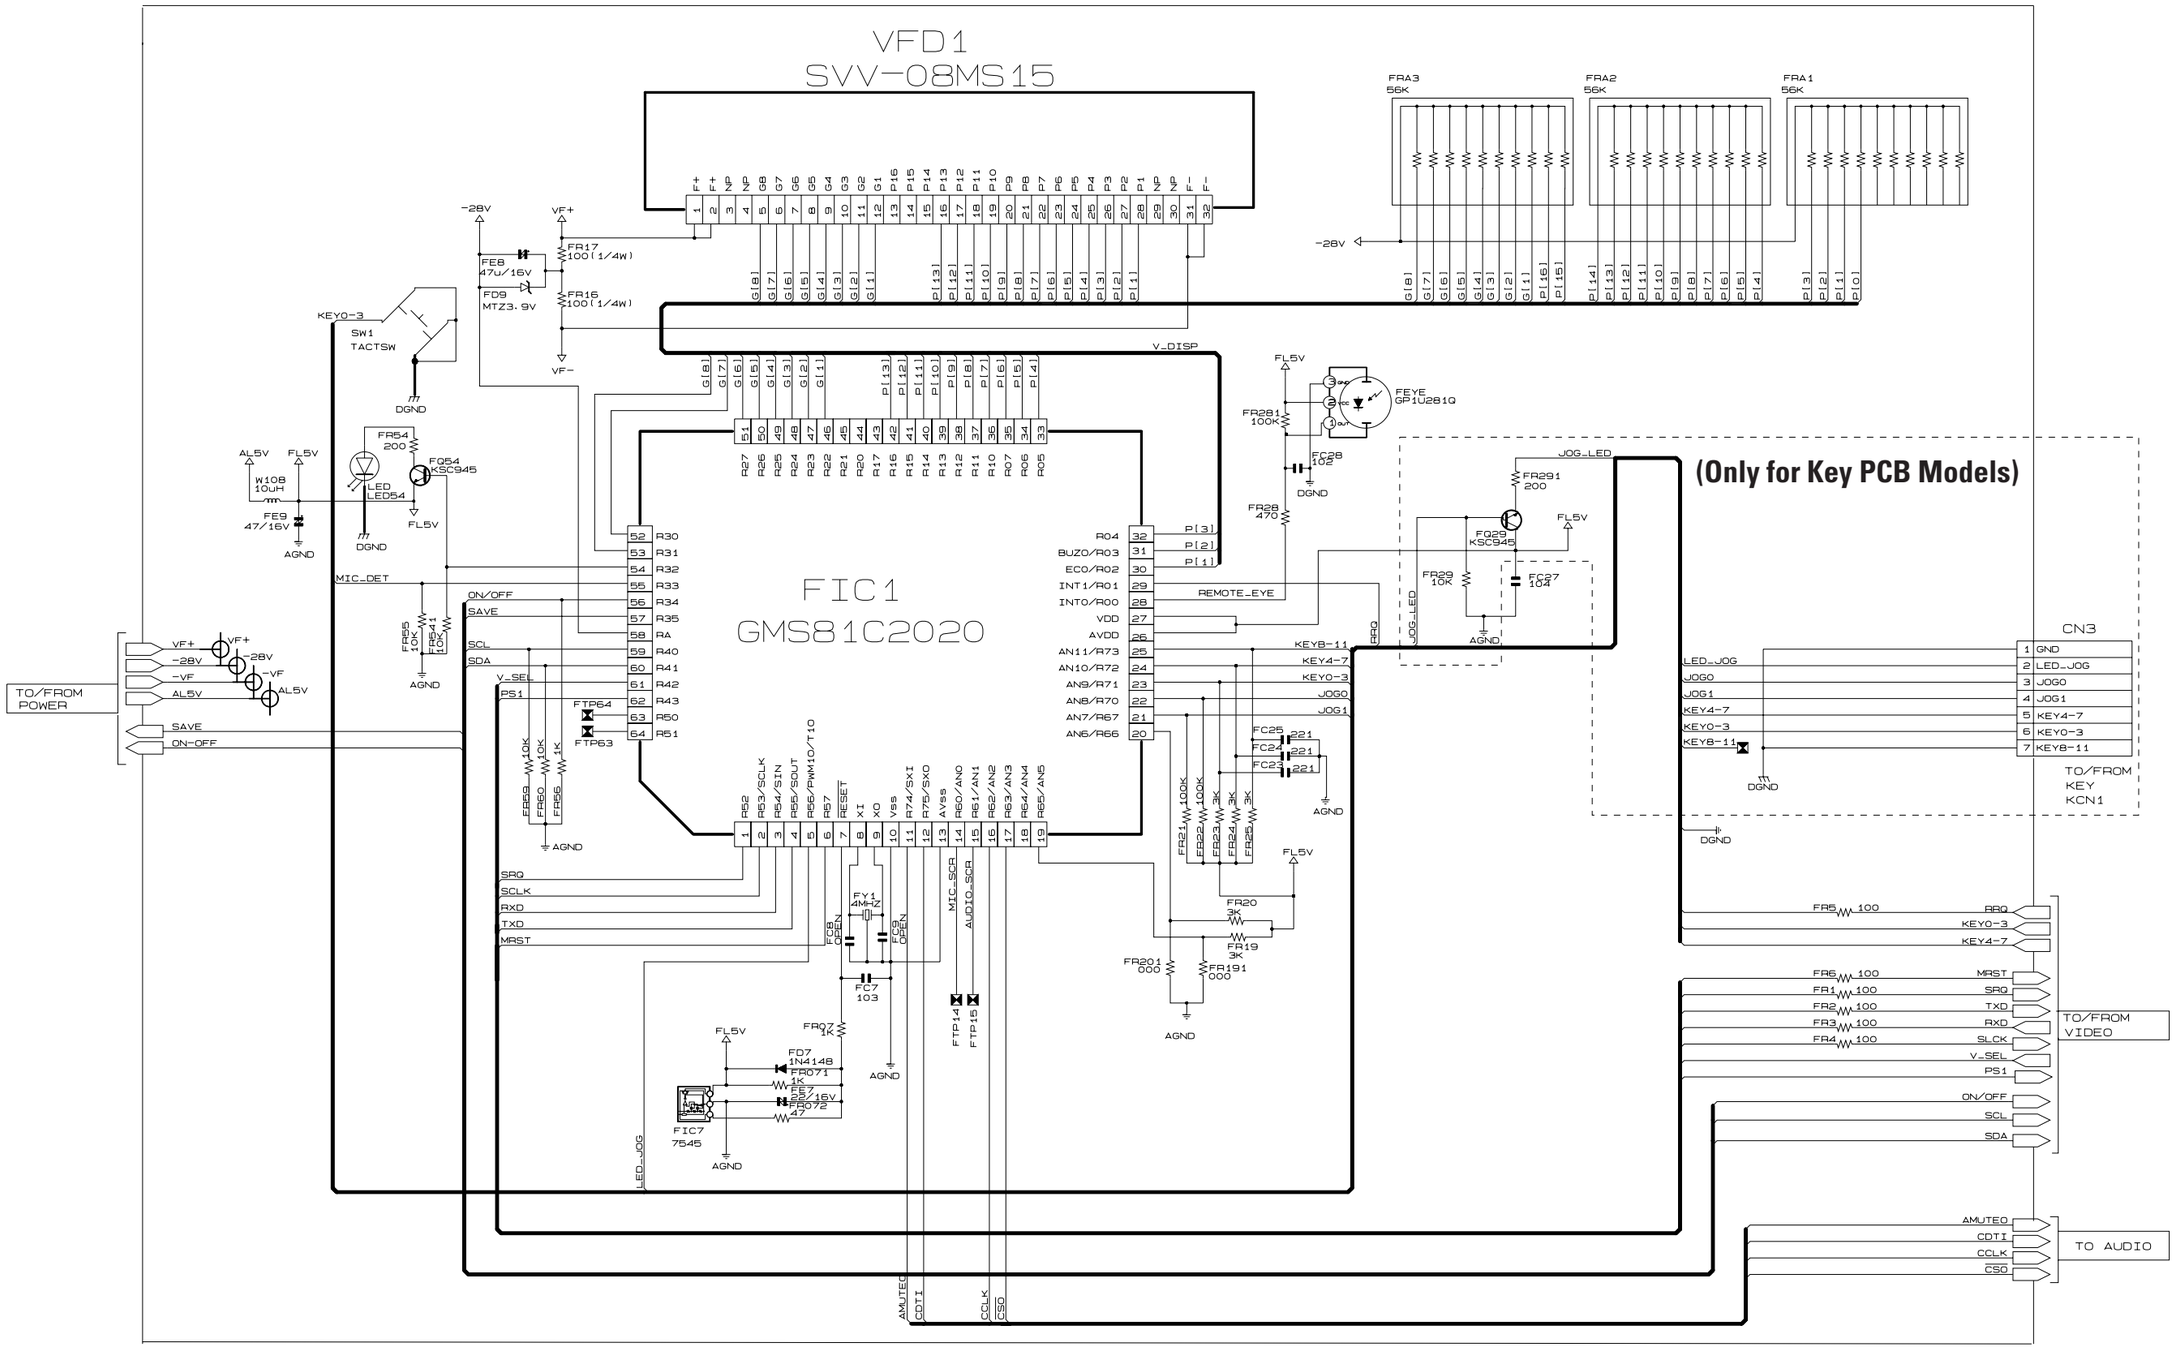

9-7 Video (Only for RCA Jack Output Models)

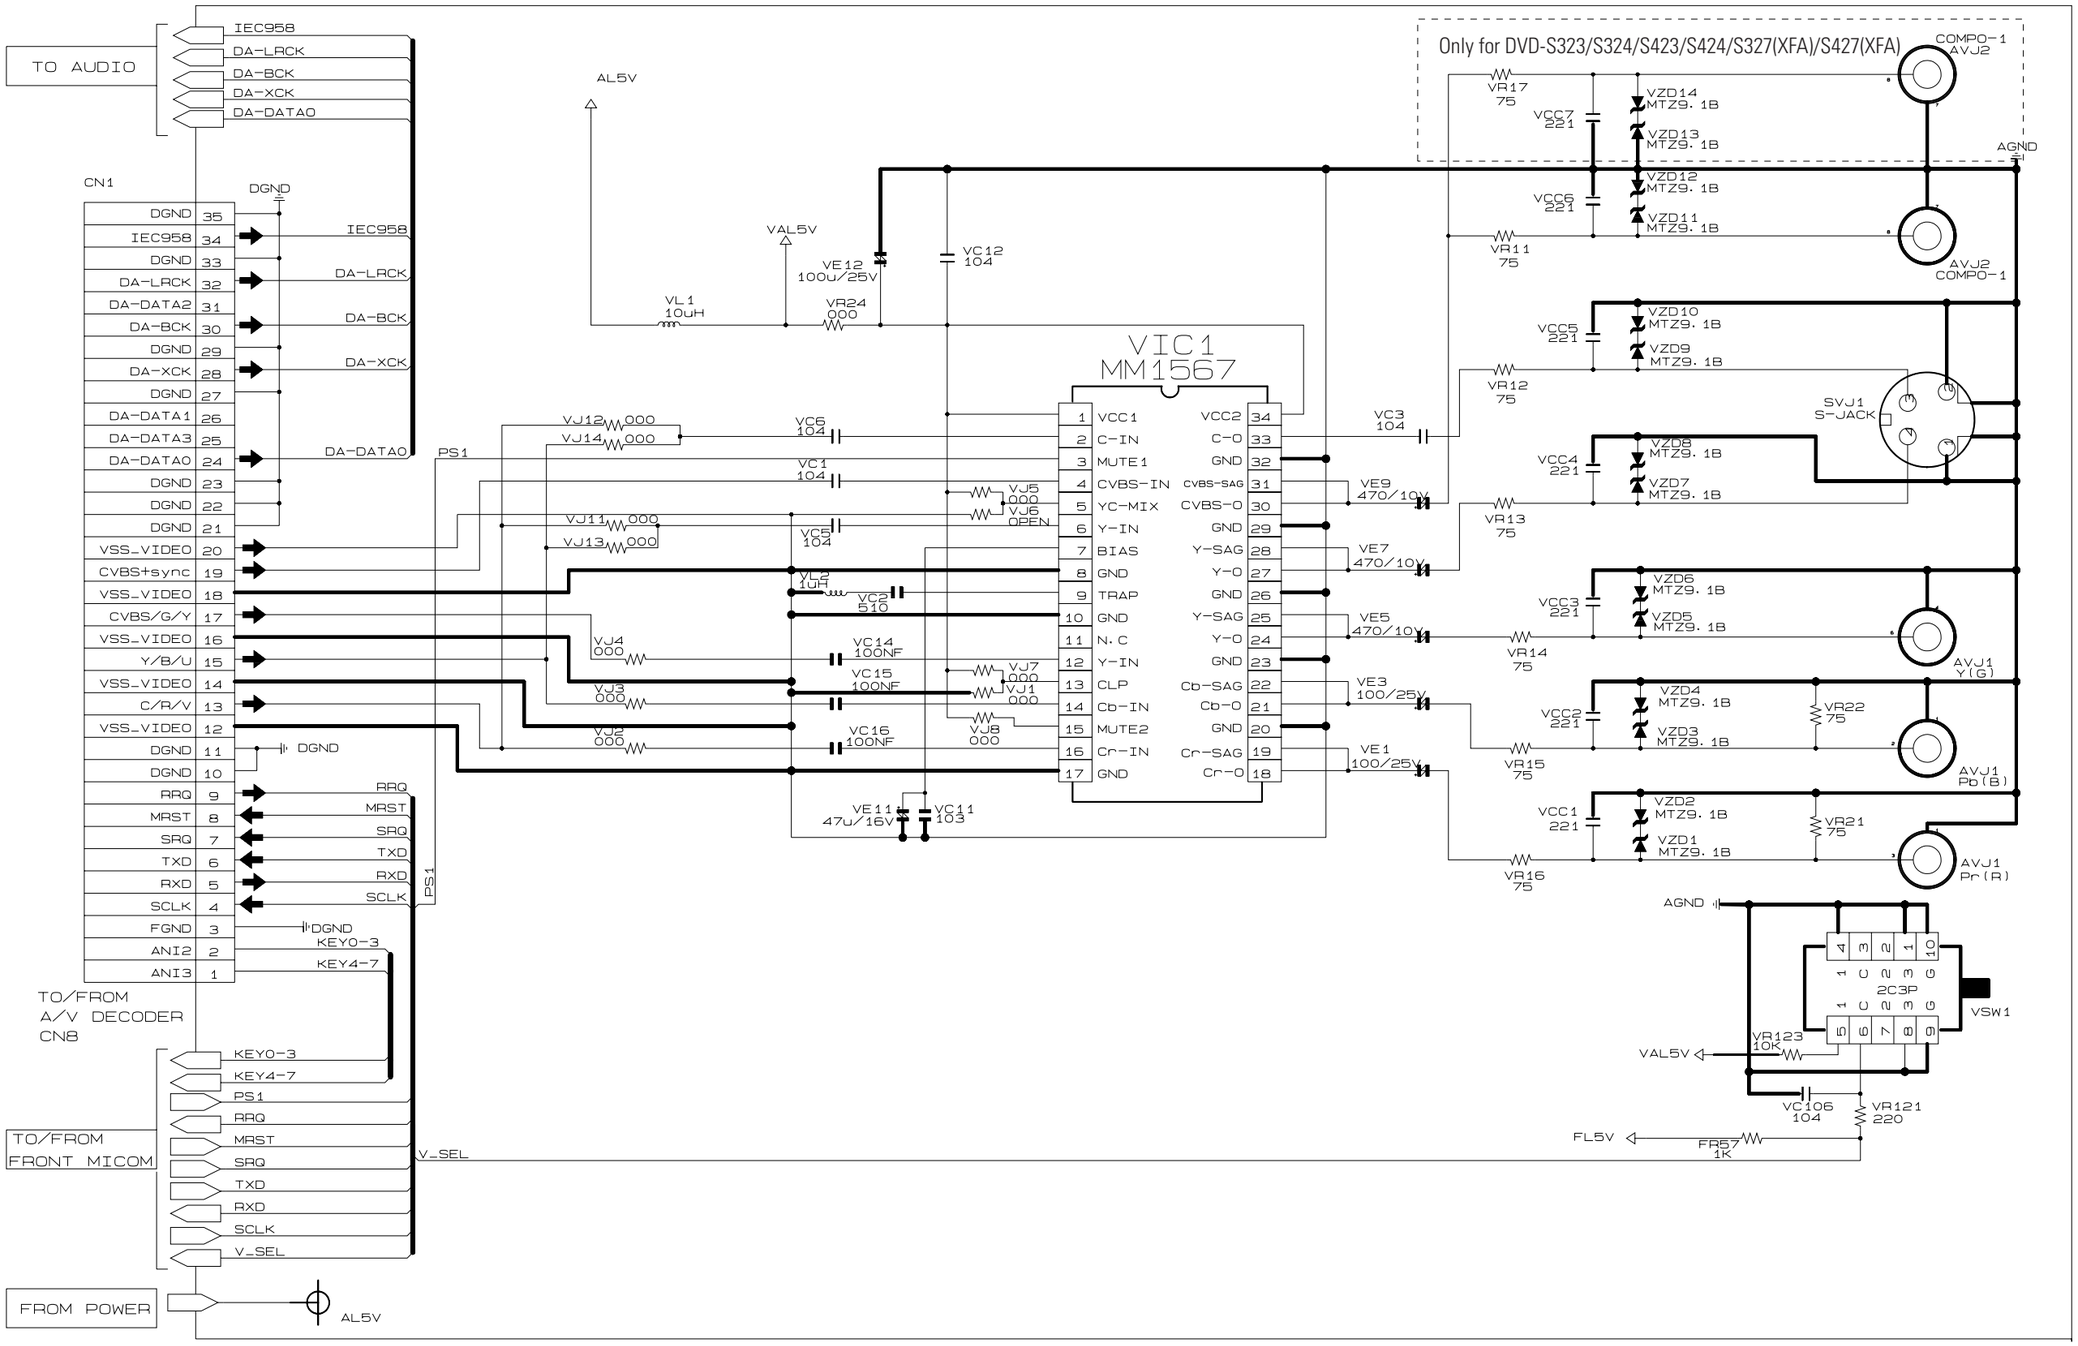

9-8 Video (Only for 1 Scart Jack Output Models)

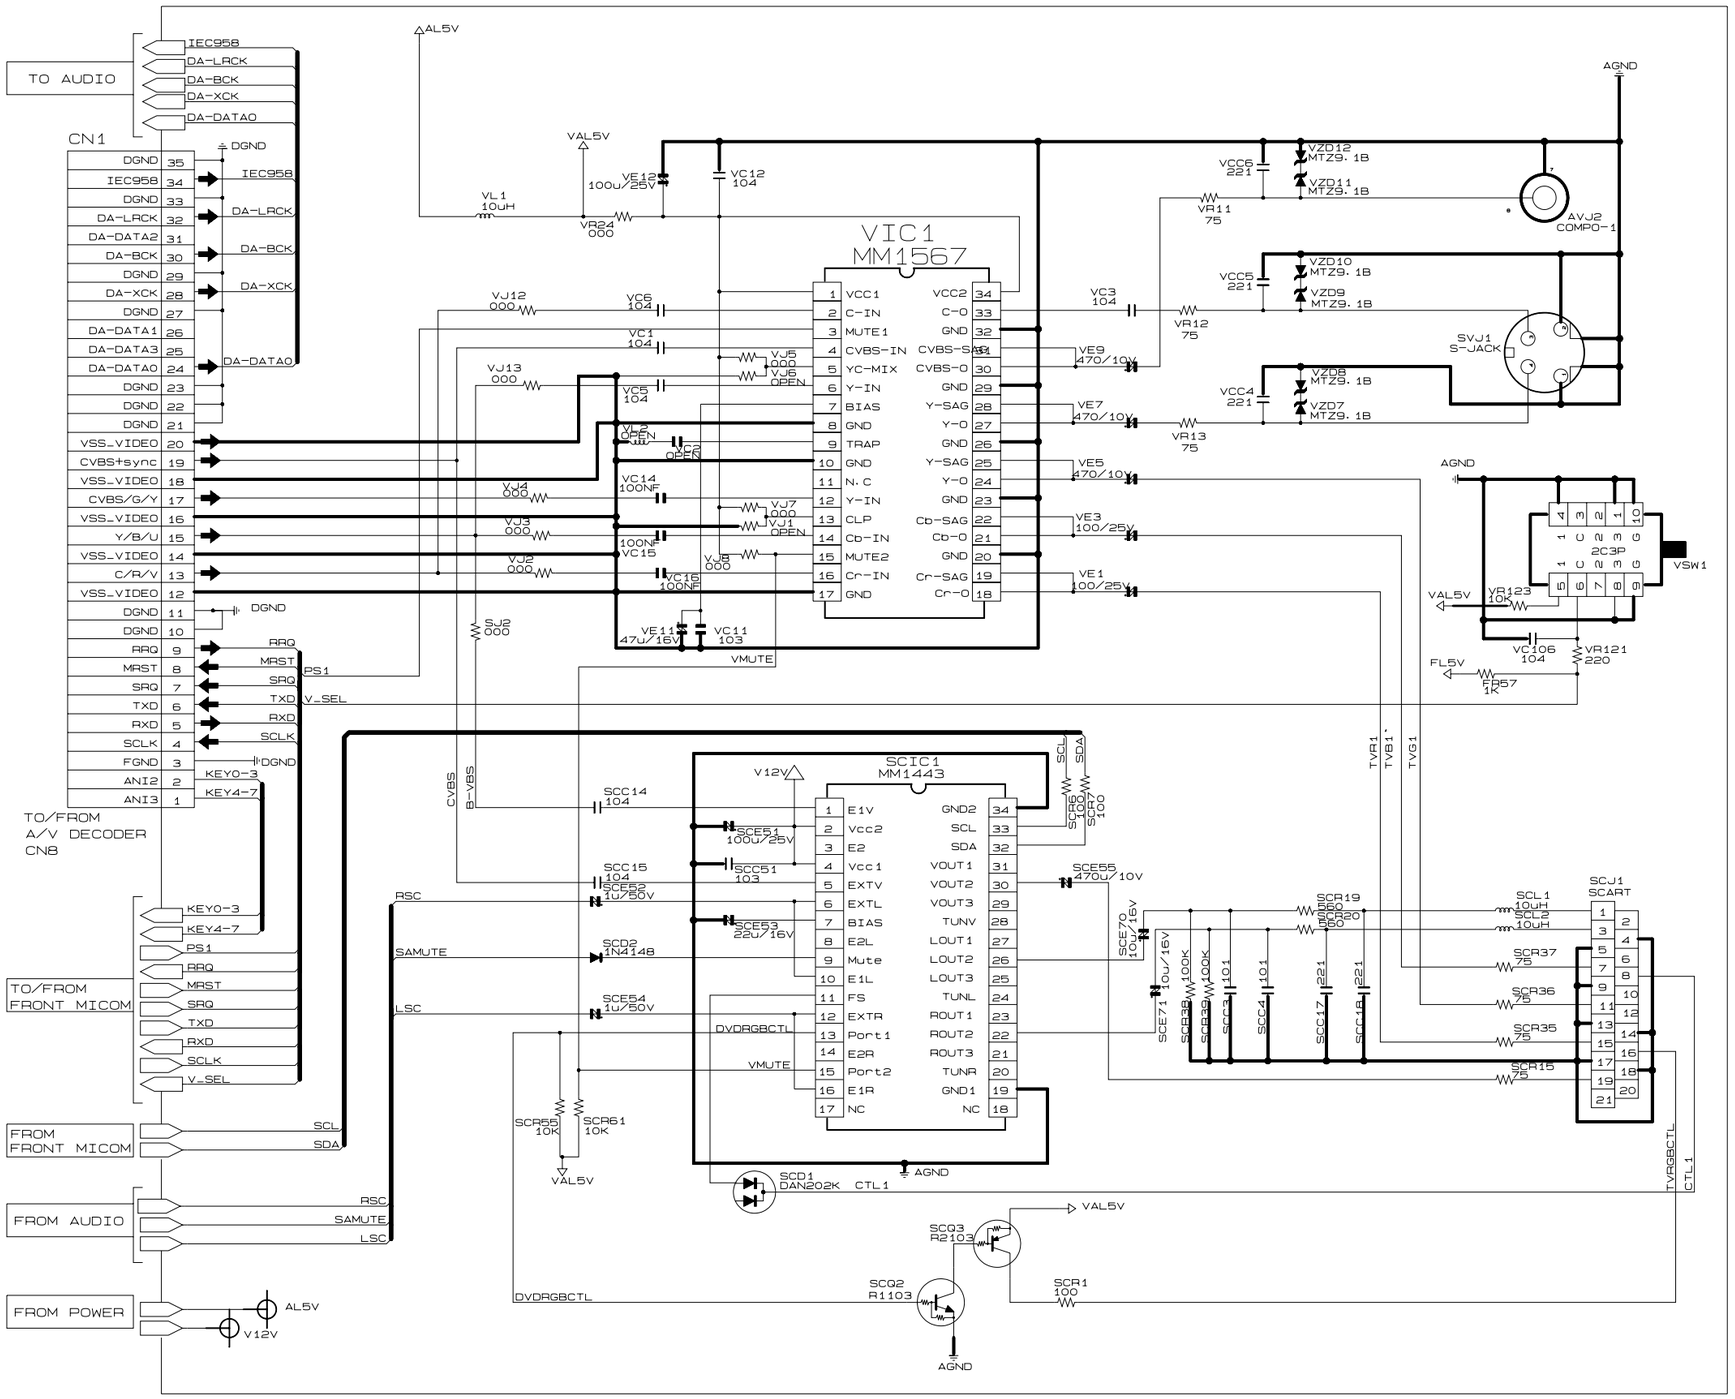

9-9 Video (Only for 2 Scart Jack Output Models)

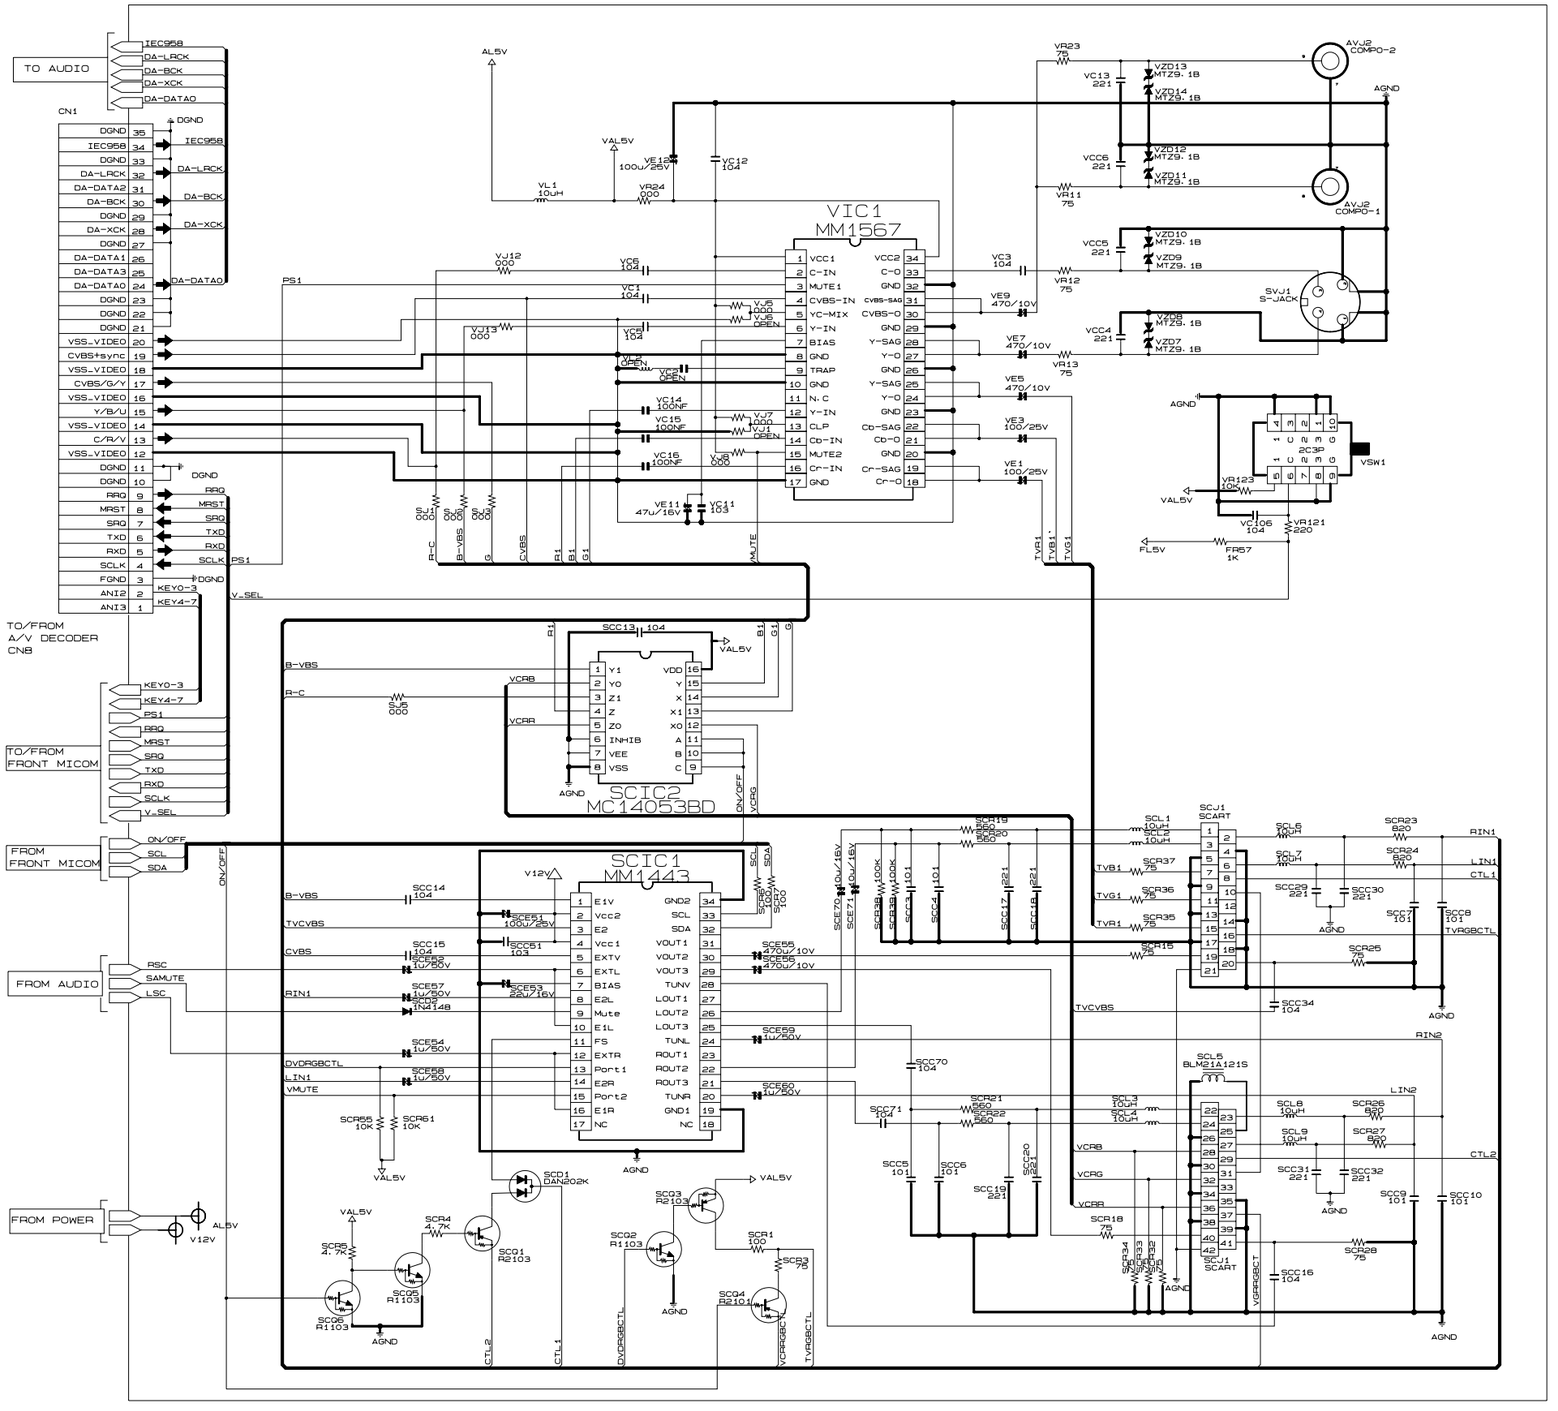

9-10 Audio (Only for DVD-S126/S126G/S127/S128/S223/S227/S228/DVD-S1515, DVD-S124/S224/FES, DVD-S224/SSM)

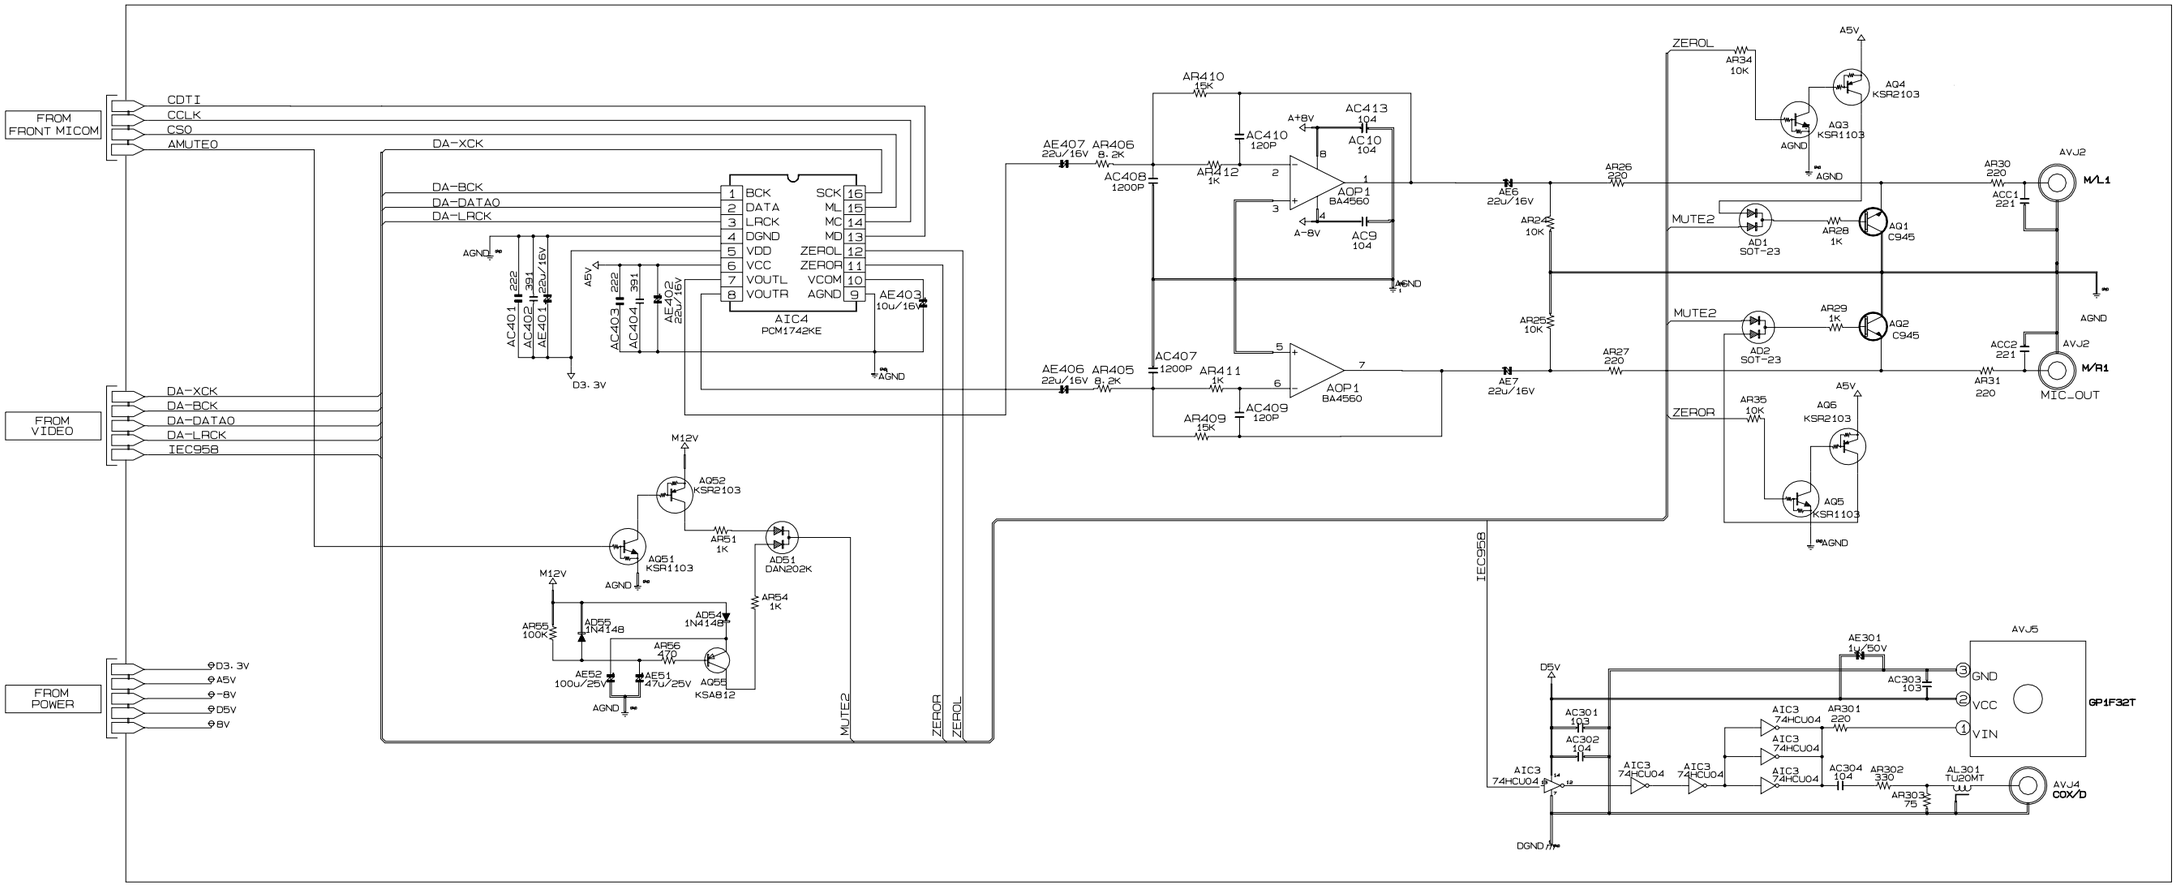

9-11 Audio (Only for DVD-S124/S224/XSA, RAD)

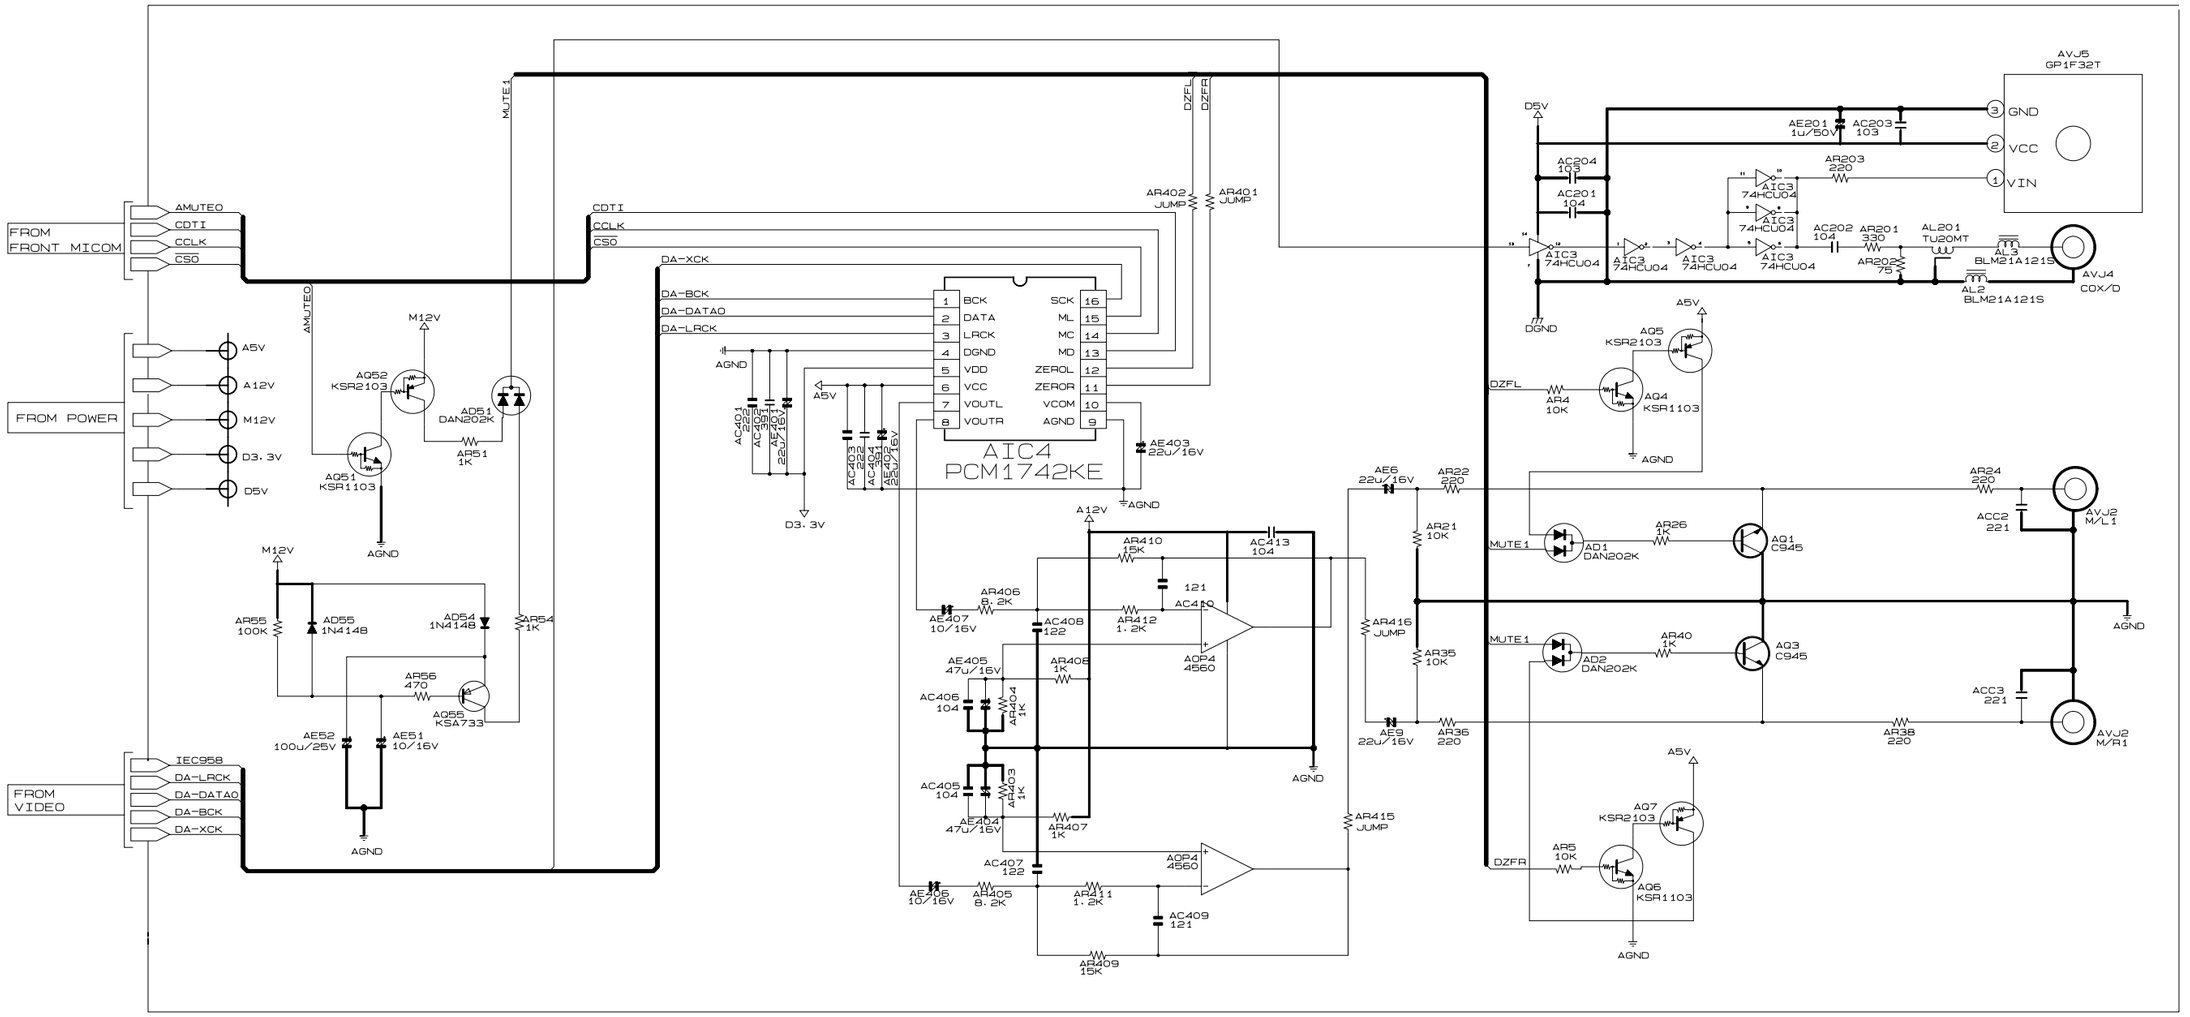

9-12 Audio (Only for DVD-S323/S327)

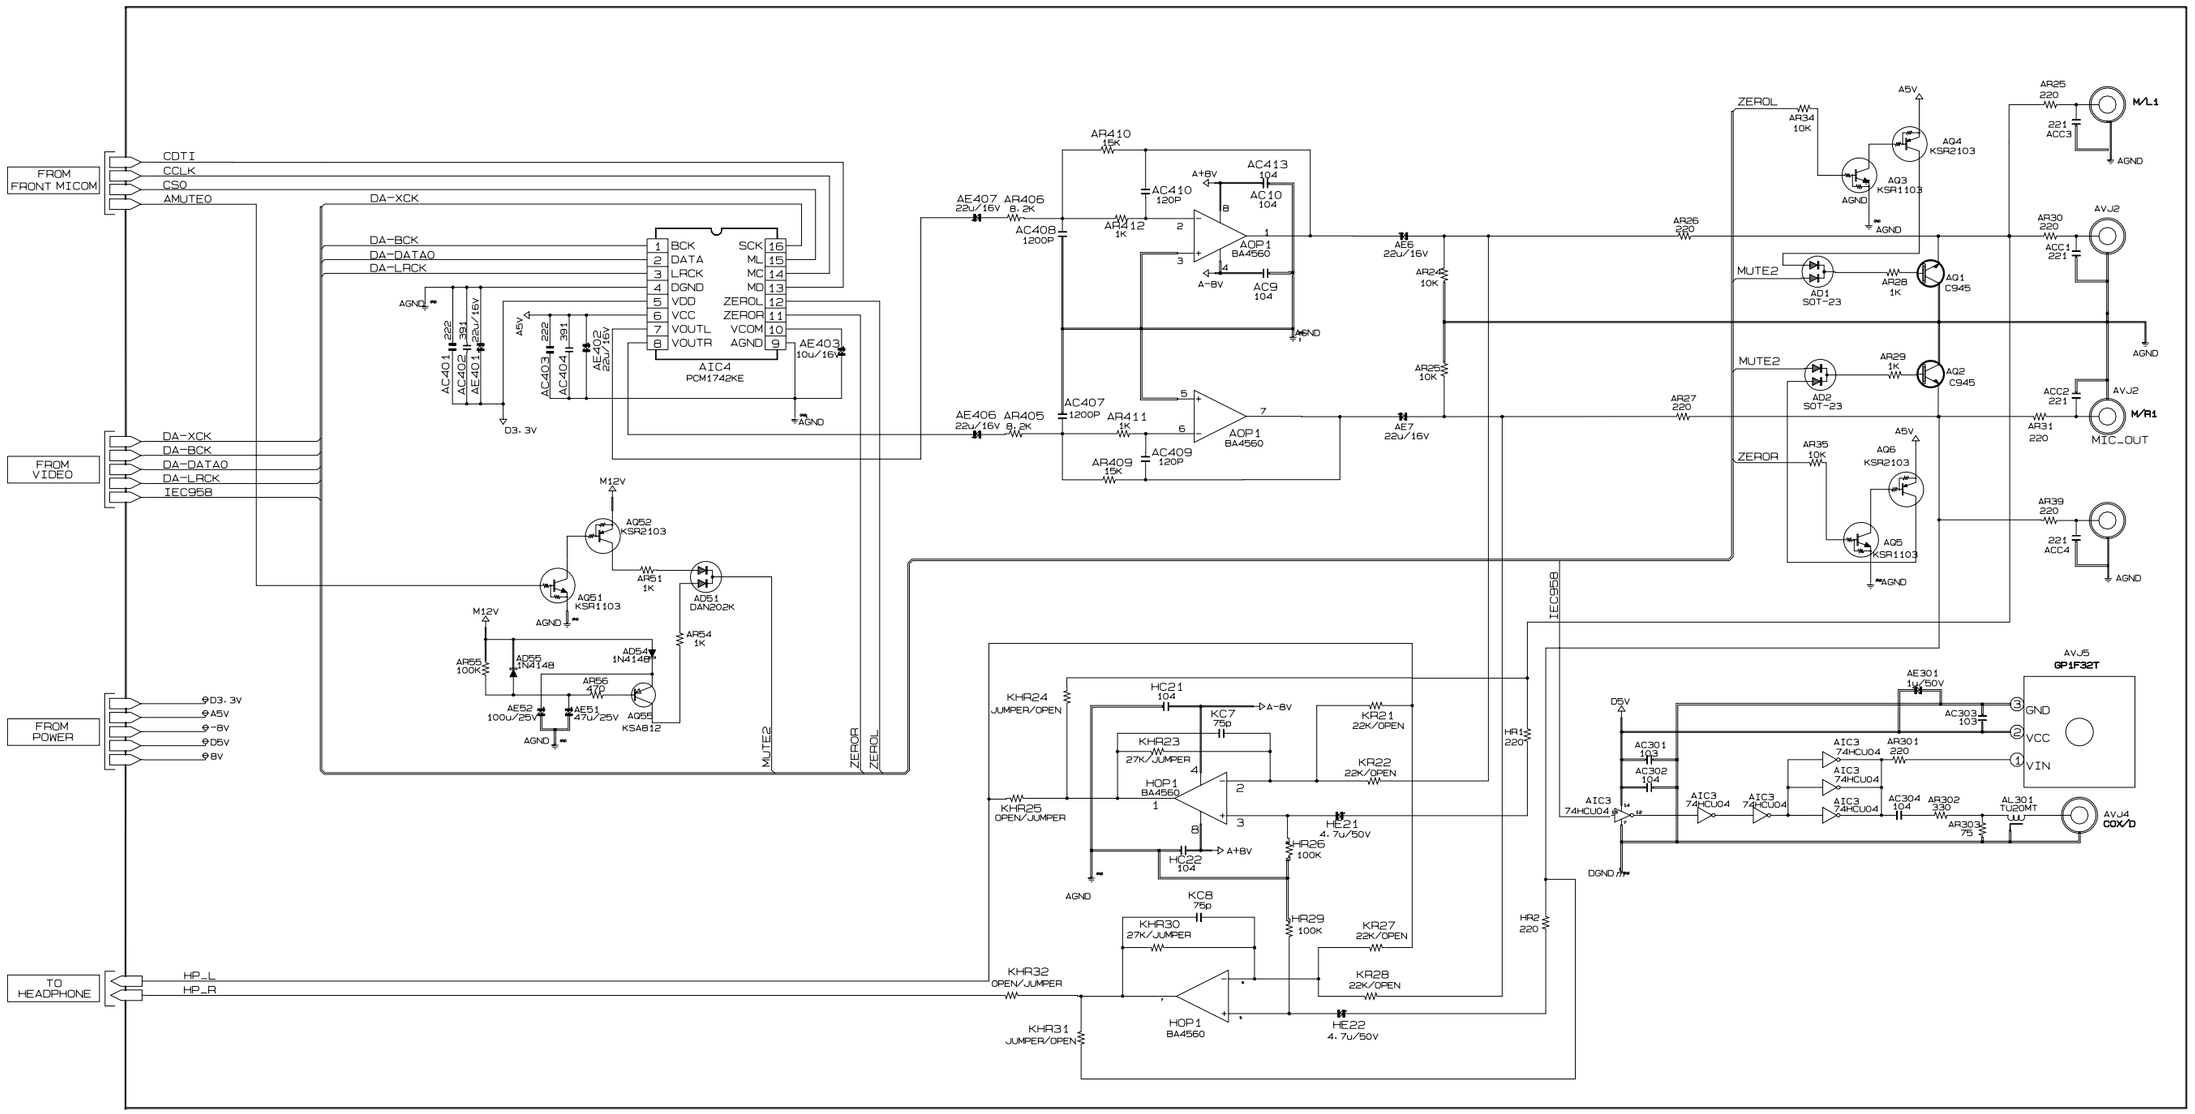

9-13 Audio (Only for DVD-S324/XSA, RAD)

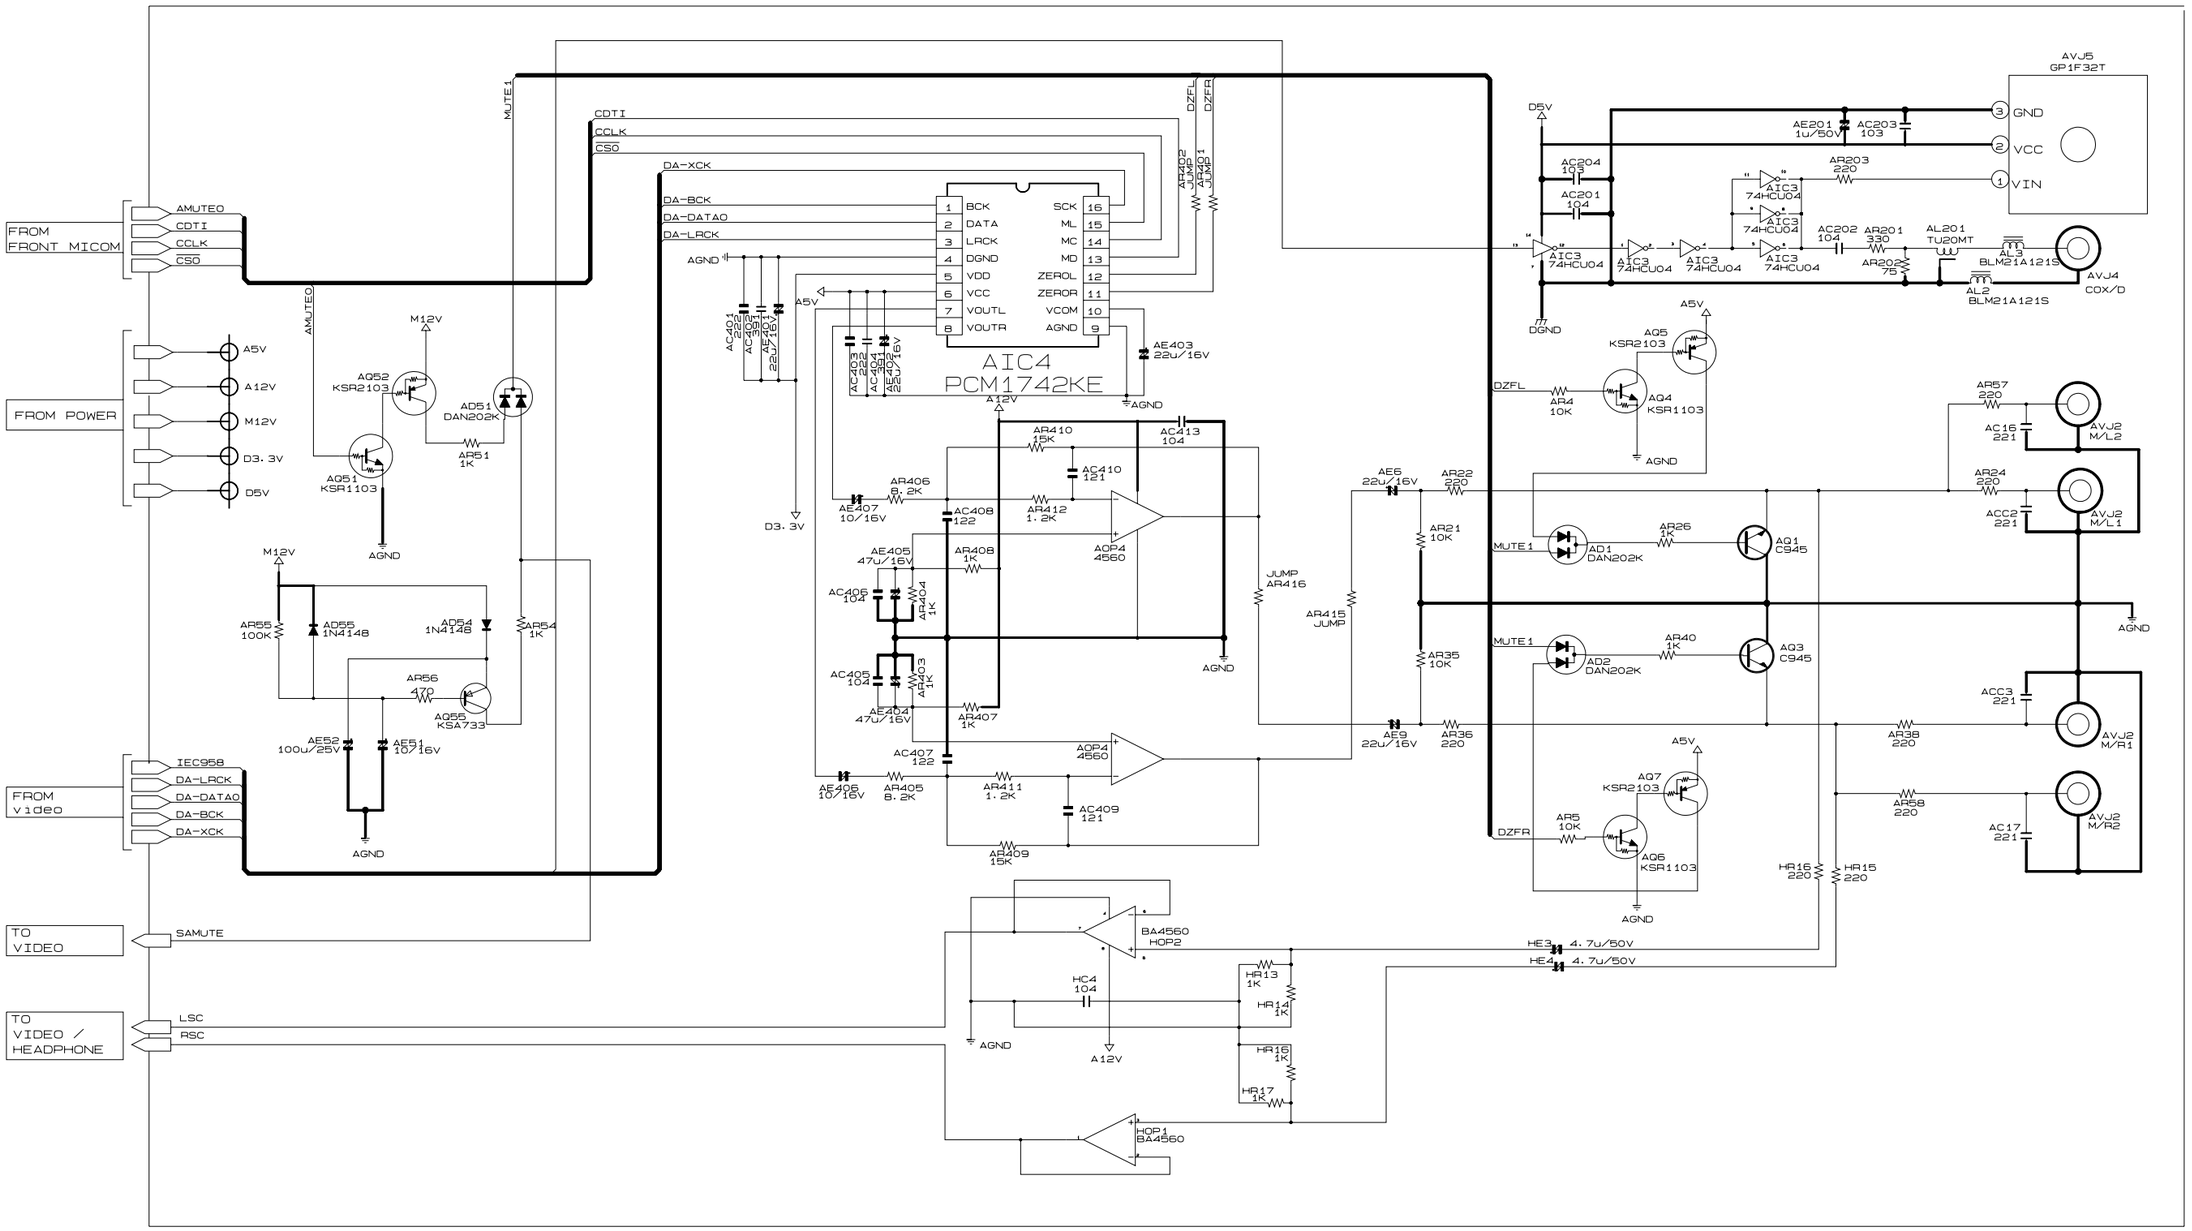

9-14 Audio (Only for DVD-S423/S424/S427)

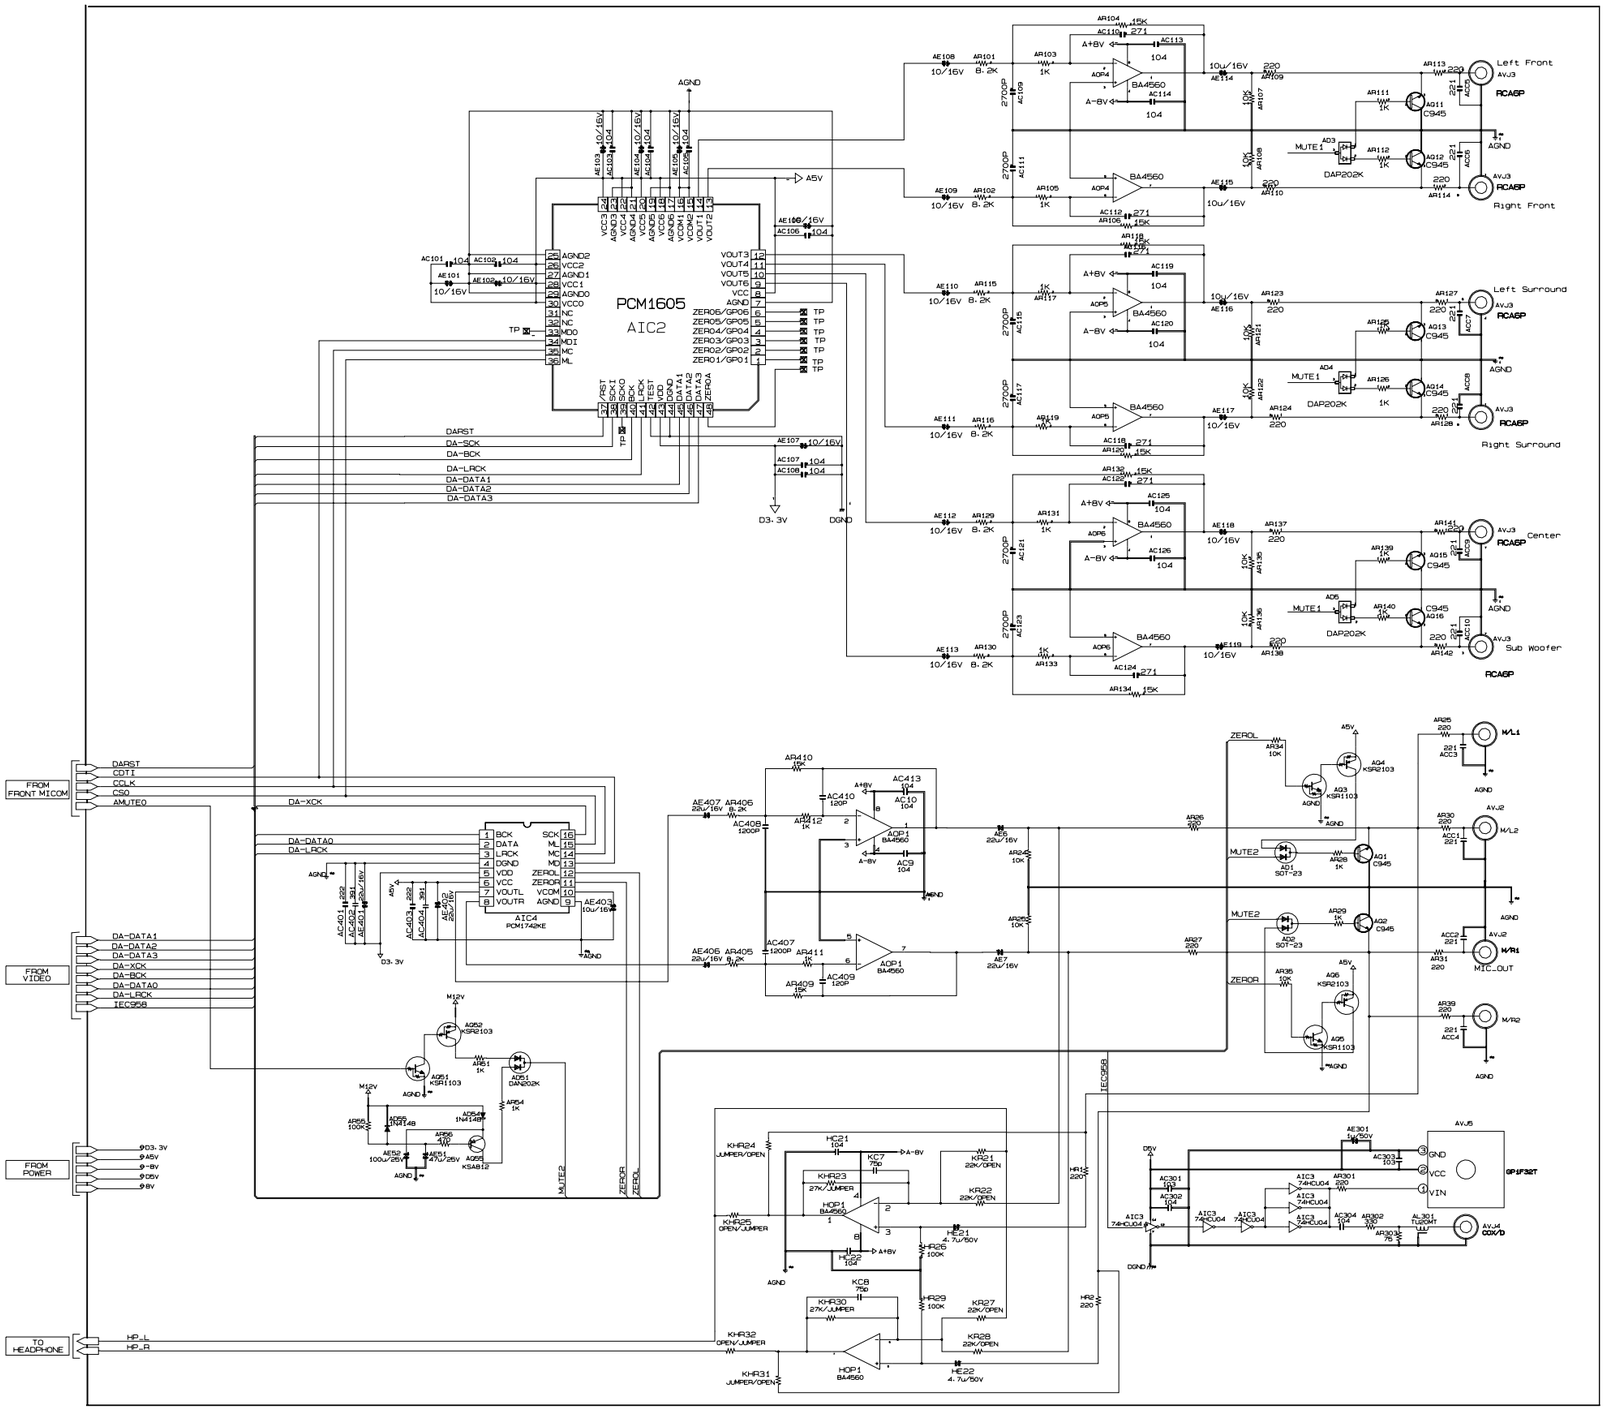

9-15 Headphone (Only for DVD-S323/S324/S327/S423/S424/S427)

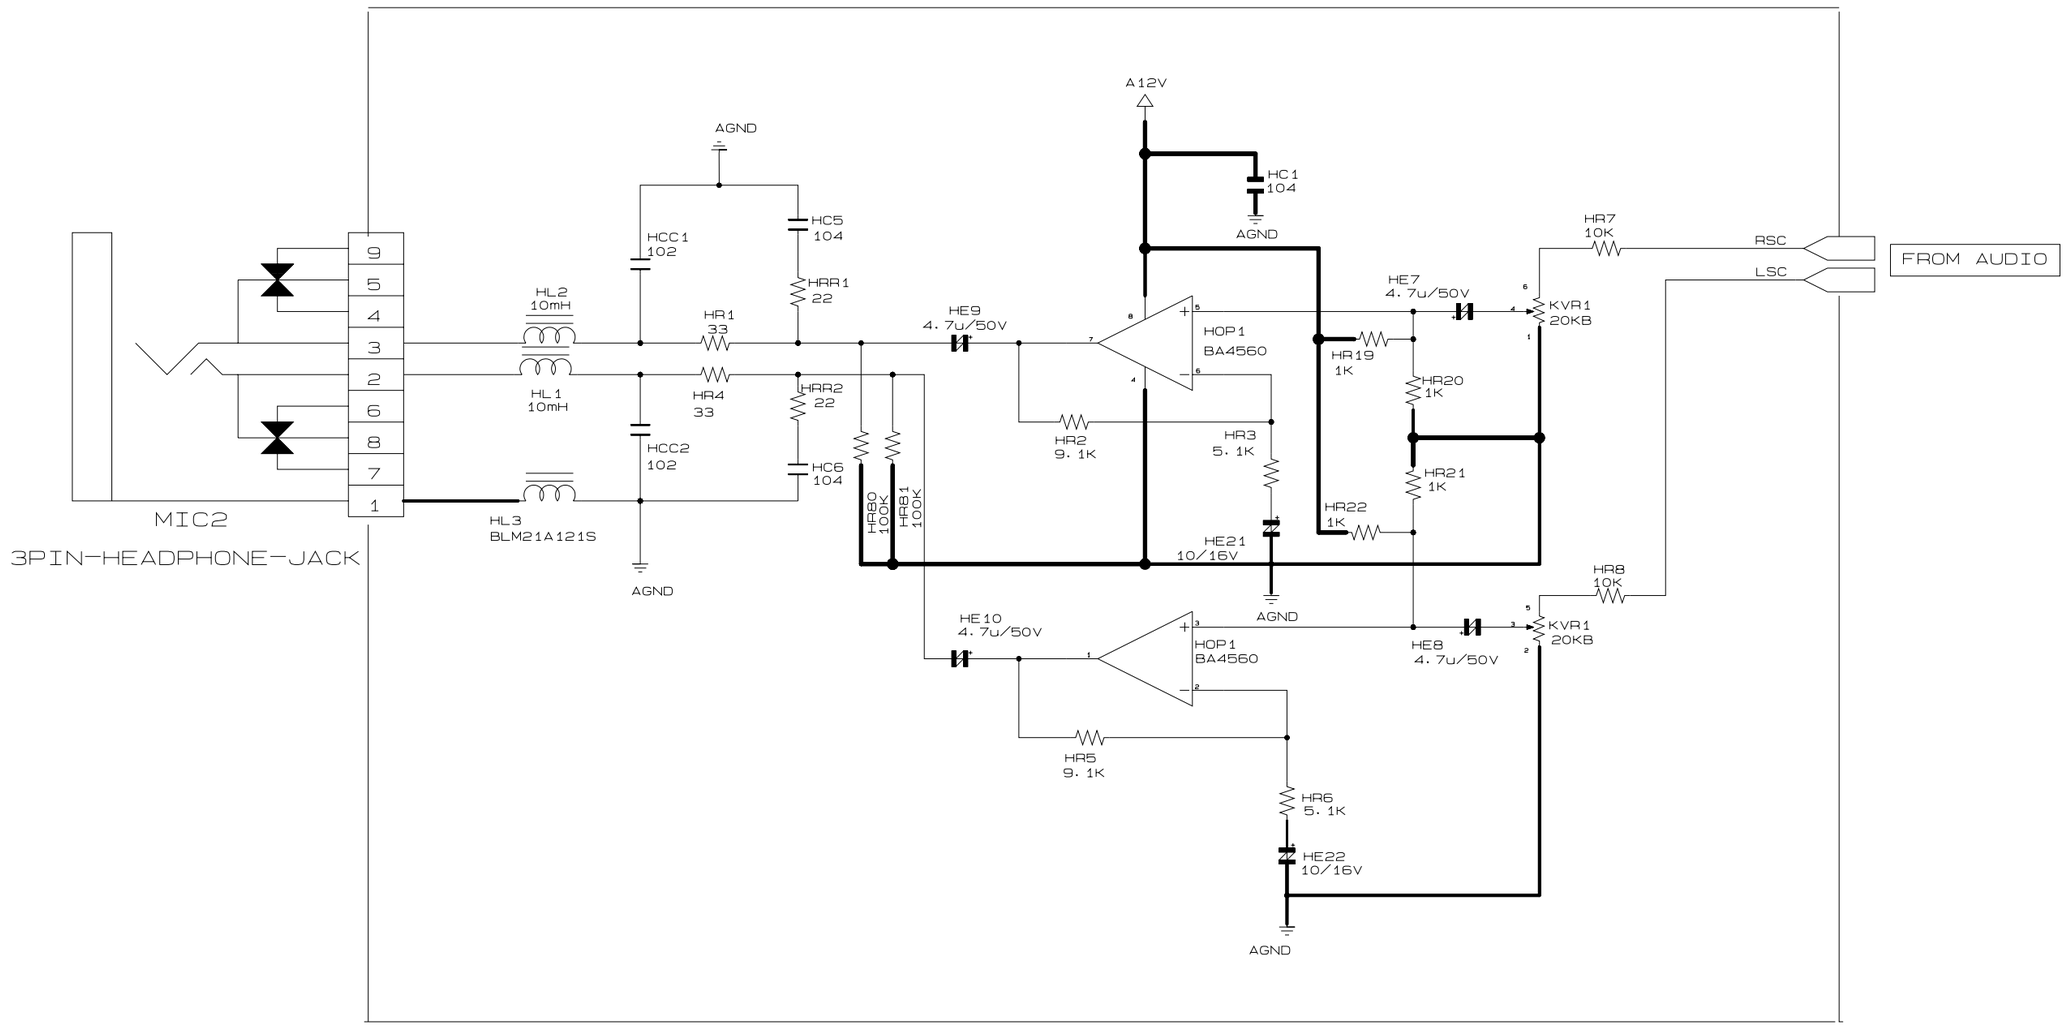

9-16 Key (Only for DVD-S323/S324/S327/S423/S424/S427)

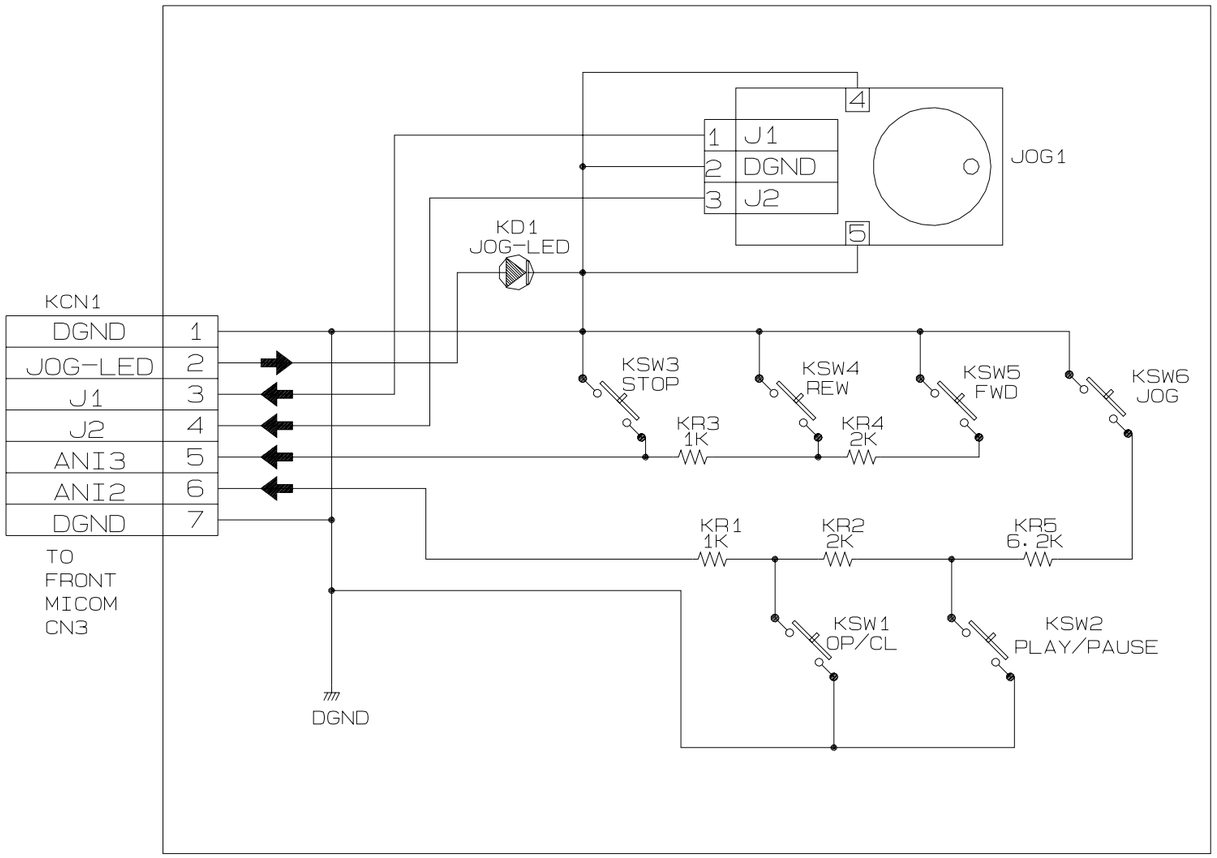

MEMO